


Document Scanner

User's Manual

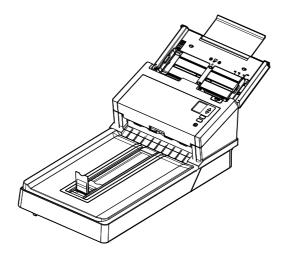

Regulatory model: DL-2011B

Avision Inc.

Trademarks

Microsoft is a U.S. registered trademark of Microsoft Corporation. Windows 7, Windows 8, and Windows 10 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Energy Star[®] is a registered trademark of the U.S. government. Other brands and product names herein are trademarks or registered trademarks of their respective holders.

Copyright

All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Avision Inc.

Material scanned by this product may be protected by governmental laws and other regulations, such as copyright laws, the customer is solely responsible for complying with all such laws and regulations.

Warranty

The information contained in this document is subject to change without notice.

Avision makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of fitness for a particular purpose.

Avision shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Federal Communications Commission (FCC) compliance information statement Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE

European Union Regulatory Notice

Products bearing the CE marking comply with the following EU Directives:

- Low Voltage Directive 2014/35/EC
- EMC Directive 2014/30/EC
- Restriction of the use of certain hazardous substances (RoHS) Directive 2011/65/EU
- RED (Radio Equipment Directive) (2014/53/EC)

CE compliance of this product is valid if powered with the correct CE-marked AC adapter provide by Avision.

This product satisfies the Class B limits of EN55032, EN55035, and safety requirements of EN62368-1.

*This machine is certified as Class 1 LED product.

Disposal of Waste Equipment by Users in Private Union



This symbol on the product or on its packaging indicates that the product can not be disposed of with your other household waste. Instead it should be sent to appropriate facilities for recovery and recycling in an effort to protect human health and the environment. Fore more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



As an ENERGY STAR[®] Partner, Avision Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

System Requirements

CPU:	Intel [®] Core™ 2 Duo or higher
Memory:	32 bit: 2 GB 64 bit: 4 GB
Optical Drive:	DVD-ROM Drive
USB Port:	USB 3.2 Gen 1x1 (compatible with USB 2.0/3.0)
Compatible Operating System:	Microsoft Windows 7, Windows 8 (32 bits/64 bits), Windows 10 (32 bits/64 bits)

Product Safety Guide

Please clearly read all these instructions, and follow all instructions and warnings before installing and using the device.

The following indications are used in this document to obviate any chance of accident or damage to you and/or the device.

A WARNING	Indicates potentially hazardous situations, which if instructions are not followed, could result in death or serious injury.
▲ CAUTION	Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

- Use only the AC power adapter that came with your device. Using any other AC power adapter could cause fire, electrical shock, or injury.
- Use only the AC power cord and USB cable that came with your device and avoid abrasions, cuts, fraying, crimping, and kinking. Using any other AC power cord and USB cable could cause fire, electrical shock, or injury.
- Do not place objects on top of the AC power cord, and do not allow the AC power adapter or the AC power cord to be stepped on or run over.
- Place the device and its AC power adapter near an electrical outlet where the AC power adapter can easily be unplugged.
- If you use an extension cord with the device, make sure that the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating.
- Place the device close enough to the computer so that the interface cable can easily reach between the device and the computer.

- Do not place or store the device or its AC power adapter:
 - Outdoors
 - Near excessive dirt or dust, water, or heat sources
 - In locations subject to shocks, vibrations, high temperature or humidity, direct sunlight, strong light sources, or rapid changes in temperature or humidity
- Do not use the device with wet hands.
- Never disassemble, modify, or attempt to repair the AC power adapter, device, or device option by yourself, except as specifically explained in the device's documentation. This could cause fire, electrical shock, or injury.
- Do not insert objects into any opening, as they may touch dangerous voltage points or short-out components. Beware of electrical shock hazards.
- Unplug the device and the AC power adapter, and refer servicing to qualified service personnel under the following conditions:
 - The AC power adapter or plug is damaged.
 - Liquid has entered the device or the AC power adapter.
 - Object has entered the device or the AC power adapter.
 - The device or the AC power adapter has been dropped, or the case has been damaged.
 - The device or the AC power adapter does not operate normally (i.e. appearance of smoke, strange smell, odd noise, etc.), or exhibits a distinct change in performance
- Unplug the device and the AC power adapter before cleaning.

▲ CAUTION:

Do not attempt to operate the battery in temperature outside the range of -20°~60° C. If so, this may cause cracking, rupturing, bursting, emission of flame or expulsion of molten metal to the outside of the equipment enclosure.
Note the the operating temperature for the battery is from -

Note the the operating temperature for the battery is from - 20° to 60° C and the operating temperature for the product is from 10° to 35° C.

- Do not locate the device on rackety or aslope tables. Do not locate the device on unstable surface. The device may fall down and this may result in injury.
- Do not place heavy objects on the unit. It may cause unbalance and the device may fall down. This may result in injury.
- Store the AC Power cord/USB cable bundled out of the reach of children to avoid the risk of injury.
- Keep plastic bags bundled out of the reach of children or throw them away to avoid the danger of suffocation.
- If you are not going to use the device for a long period, unplug the AC power adapter from the electrical outlet.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device is intended only for OEM integrators under the following conditions:

1) The antenna must be installed such that 20 cm is maintained between the antenna and users.

2) The transmitter module may not be co-located with any other transmitter or antenna.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. To maintain compliance with FCC RF exposure compliance requirements, please avoid direct contact to the transmitting antenna during transmitting.

IC Notice:

Operation is subject to the following two conditions:

1) This device may not cause interference and

2) This device must accept any interference, including

interference that may cause undesired operation of the device.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Règlementd' Industry Canada

Les conditions de fonctionnement sont sujettes à deux conditions:

(1) Ce périphérique ne doit pas causer d'interférence et.

(2) Ce périphérique doit accepter toute interférence, y compris les interférences pouvant perturber le bon fonctionnement de ce périphérique.


1. Introduction


Congratulations on your purchase of the high speed document image scanner. With this scanner, you can you scan your multi-page documents from the auto document feeder at a rated speed to increase your efficiency.

 
Before you install and operate the new scanner, please take a few minutes to read through this manual. It provides proper instructions for you to unpack, install, operate and maintain the scanner.

1.1 Package Items

The following figure indicates the package contents. Please check all the items against your checklist. If you do not receive all the items, please contact your authorized local dealer immediately.

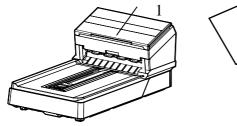

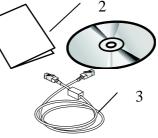




- 1. Scanner Main Unit
- 2. Quick Guide/CD
- 3. Ethernet Cable
- 4. USB Cable
- 5. Power Adapter & Power Cord
- 6. Calibration Sheet

NOTE:

- Only use the WA-36A24R/DA-48M24 (APD)/ADS-65LSI-24-3 24048E (Honor) included in the machine. Using other AC adapters may damage the machine and void the warranty.
- Please unpack the packing carefully, and check the contents against the checklist. If any items are missing or damaged, please contact your dealer immediately.
- To access more service supports, visit <u>www.avision.com</u> to register your Avision's product.


1.2 Front View

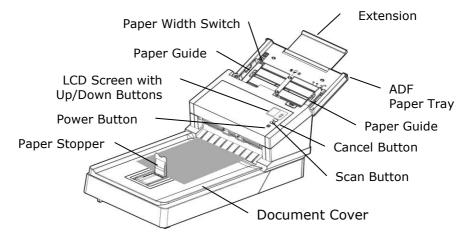

Part Name	Description
Extension	Can be pulled out and adjusted to the size of the document being scanned.
Paper Width Switch	Slide it up or down to fit your paper size.
ADF Paper Tray	Load the document onto this part when scanning document.
Paper Guides	Adjusts to the width of the documents to prevent skewing of the scanned pages.
Operation Panel	LCD screen: Shows a number indicating a scan-to destination via the Up/Down buttons. The Power Button: Press to turn on the power. The Scan Button: Press to start a scan. The Cancel Button: Press to cancel a scanning job during operation.


Document Cover	Open it to place the document on the glass platen.
Paper Stopper	Adjust to the length of the documents to prevent them from falling apart.

1.3 Rear View

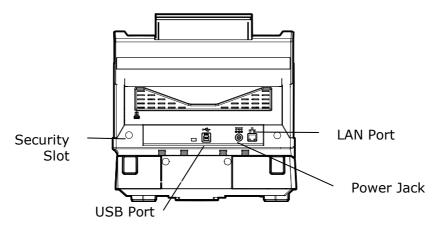


Item	Description	
LAN Port	Used to connect to network.	
Power Jack	Connect the AC adapter to the scanner.	
USB Port	Connect to your computer.	
Kensington Security Slot	Attach to a lock to secure the scanner.	

1.4 Side View

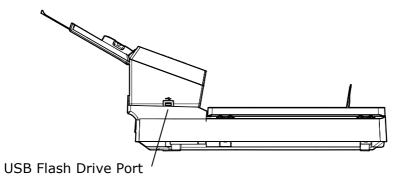

Item	Description
USB Flash	Used to insert an USB flash drive to
Drive Port	store the scanned image.

 1.5 Control Panel



Item	Description
	 Display the scanning and error status. Display using TWAIN or Button Manager V2 and its function.
\bigtriangledown	Used to scroll up and down to select your function button via the software application - Button Manager V2.
Scan	 Press to start a scan via the software application Button Manager V2.
	\rightarrow Press to confirm a selection.
Cancel	➔ Press to cancel a scanning job during operation.
	→ Press to return to the home screen.
ψ	 → Press to turn on the power. → Long press to turn off the power.

1.6 LCD Display

App Scanning

After installing the scanner driver and connecting the scanner to your computer via an USB cable or ethernet cable, the following LCD display will be prompted:

Indicates successful USB connection

-⇔ - ≞		 Indicates
5	₽	successful connection
1. USB		
2. PC 1		Indicates th name of yo computer

LAN

he login our

You may use a TWAIN-compliant application such as Avision Capture Tool to start a scan. Refer to chapter 4 – Using Avision Properties Dialog Box for more details on how to start a scan.


Button Scanning

After installing the scanner driver, Button Manager, 1. connecting the scanner with an ethernet cable or an USB cable, and opening the Button Manager, the following LCD display will be prompted:




2. Select your computer.

3. Press (OK), the following Button Manager panel will be displayed. Use the Arrow key to select your desired button no. or destination. Up to 9 destinations can be selected.

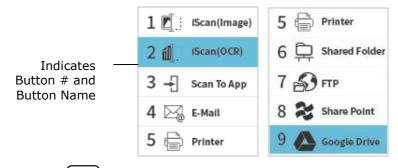

4. Press (Scan button), the paper starts feeding into the scanner and the scanned image will be sent to your specified destination.

Refer to chapter 6 – <u>Using the Buttons</u> on how to press the button to complete a scan.

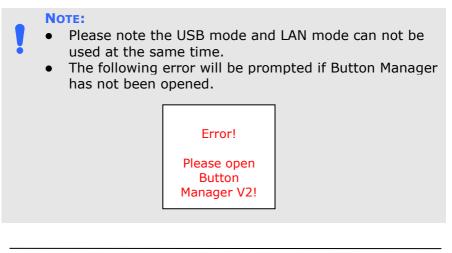


Status Bar/Options

Icon/Option	Status Indication
~ \$	Successful USB connection between PC and scanner
((及))	Successful Wi-Fi AP (Access Point) Connection
(:	Turn on Wi-Fi connection.
	Successful ethernet cable connection.
5	Select to refresh the connection status.
*	Select to access more settings.
WPS	Select to use WPS (Wi-Fi Protected Setup) to connect to a wireless access point which supports WPS.
Information	Select to view the scanner's information including scanner, ethernet and Wi-Fi.
Reset	Select to return to factory default settings includng DHCP enable, turning off Wi-Fi, default device name, host name, and SSID.

Wired (Ethernet) and Wireless (Wi-Fi) Networks: The availability of these features varies according to your product model.

1.7 Removable Parts

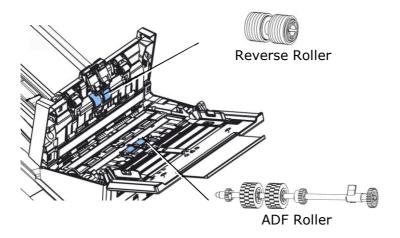

For information about how to replace the consumable, please refer to <u>Chapter 8 – Maintenance</u>.


2. Scanner Installation

2.1 Precautions

- Keep the scanner out of direct sunlight. Direct exposure to the sun or excessive heat may cause damage to the unit.
- Do not install the scanner in a humid or dusty place.
- Be sure to use the proper AC power source.
- Place the scanner securely on an even, flat surface. Tilted or uneven surfaces may cause mechanical or paper-feeding problems.
- Retain the scanner box and packing materials for shipping purposes.

2.2 Unlocking Your Scanner


The scan unit is locked during transport to protect the scanning mechanism from being damaged. **Be sure to unlock the scan unit before using the machine.**

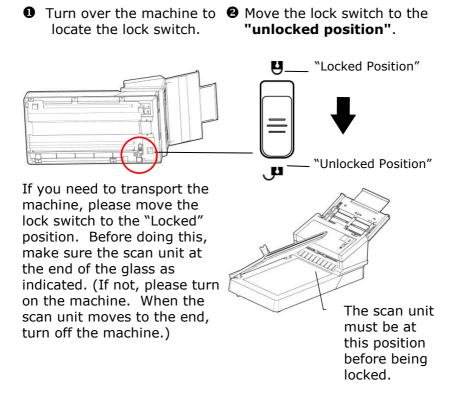

2.3 Connecting to Power


Before connecting, make sure the power switch is off.

Plug the small end of the power adaptor into the power jack of your scanner. Insert the other end to an appropriate power outlet.

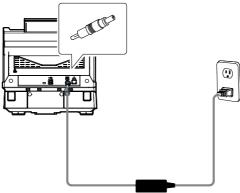

2.4 Turning on the Power

Press the **Power** Switch button on the front panel, the Power LED will flash. When it is finished and ready to scan, the LED indicator will stop flashing and become steadily on. To turn off the scanner, press the Power Switch button for about 3 seconds, the Power LED will be off.

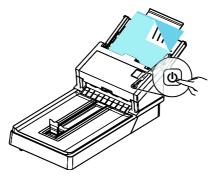

2.5 Installing the Scanner Driver

NOTE:

- **1.** To ensure your computer can identify the USB scanner, please install scanner driver first before connecting the scanner to your computer.
- 2. The scanner driver contains TWAIN, ISIS and WIA driver. After the installation of scanner driver is completed, this scanner allows you to scan via a TWAIN, ISIS, or a WIA interface. Start your TWAIN-compliant image editing software application to select a TWAIN or WIA user interface or your ISIS software to select an ISIS user interface. You may also launch Microsoft's Scanner and Camera Wizard to scan via a WIA user interface.
- 1. Place the supplied CD-ROM onto your CD-ROM drive.
- 2. The software installation graphic appears. If not, run "setup.exe".



Contents on the installation graphic:


- **Install Scanner Driver:** To communicate with your scanner, you need to install the scanner driver.
- **Install Button Manager V2**: To use the buttons on the scanner, you need to install Button Manager V2. To ensure Button Manager V2 works properly, please FIRST install scanner driver before installing Button Manager V2.
- **Install Virtual Scanner Link**: To connect your computer to the scanner in the network, you need to install the Network Setup Tool.
- **Install AVScan X:** To scan and organize your multipage document(s), you can install the software application to manage them easily and effectively.
- View Manual: Click "View Manual" to view or print the detailed user manual for the scanner and Button Manager V2 respectively.
- 3. Click **Install Scanner Driver** to install the scanner driver and then click **Install Button Manager V2** to install the Button Manager V2 unto your computer.

2.6 Connecting to Computer

1. Connect the **square end** of the USB cable to the USB port of your scanner. Connect the **rectangle end** to the USB port at the rear side of your computer.

NOTE:

The scanner is designed with a USB 3.2 Gen 1x1 interface to ensure the optimal speed. If your computer comes with a USB 3.2 Gen 1x1 port, make sure to connect the scanner to your computer to the USB 3.2 Gen 1x1 port which is distinguished in blue color at the back of your computer. The USB 3.2 Gen 1x1 port enhances your scanning speed and is also compatible with USB 2.0 and USB 1.1.

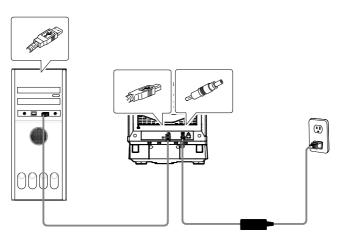


- 2. The computer should detect a new USB device and prompt a **"New Hardware Found"** message.
- 3. By following the on-screen instructions, click the **Next** button to continue. When the certification screen appears, click **Continue Anyway** to complete the installation.
- 4. When the **Finish** dialog is prompted, click the **Finish** button.

2.7 Connecting a Network Cable

1. Connect one end of your network cable to an available port of the switching hub of your LAN.



2. Connect the other end to the LAN port marked **D** at the back of the product as shown.

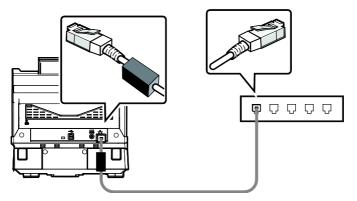

2.8 Using the Network Scanner for the First Time

Before connecting to the network scanner, make sure that Virtual Scanner Link (Network Setup Tool) has been installed onto your computer. The Network Setup Tool is included in the supplied software CD.

 Start [Virtual Scanner Link] by choosing Start>All Programs>Avision Virtual Scanner>Virtual Scanner Link. The main window will be displayed and the scanners in your network will be searched automatically. In a few seconds, the result including the scanner model and scanner's IP address will be displayed as shown.


Model Name	 Device Name 	MAC Address	IP Addres
ADXXX	Avision-014685	000232014685	10.1.20.17
ADXXX	Avision-01403A	00023201403A	10.1.20.74
	ADXXX	ADXXX &vision-014685	ADXXX &vision-014685 000232014685

 Choose the scanner you wish to connect and then press [Connect]. If connection is successful, a connection mark will be displayed as shown.

Virtual Oci	anner Link	l	Refresh	Options
• Vendor	Model Name	- Device Name	MAC Address	IP Add
- vision	ADXXX	Avision-014685	000232014685	10.1.20
Avision	ADXXX	Avision-01403A	00023201403A	10.1.20

3. After the scanner has been connected successfully, launch your TWAIN-compliant image-editing software application to start a scan (Figure A).

Or simply press the (Scan) [Scan] button on the scanner to start a scan (Figure B).

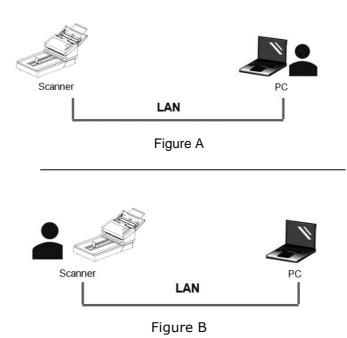

NOTE:

- The VSL program allows multiple users to connect to the network scanner at anytime. Yet, the scanner operation can be used by one user at a time. If the network scanner is being used by other user, you will be prompted with a message to connect the scanner later. When the scanner is available, you will also be prompted with a message to connect the scanner and start scanning your document.
- If the network scanner has not been found, it is probably the scanner and your computer are not in the same LAN. In this case, you can assign a specific IP address of the scanner to let [Virtual Scanner Link] automatically search the scanner. Click the [Option] button, type your IP address on the [Searching Address] field (1), then click the [+] button (2) and finally click [OK] (3) to complete.

Settings	Language:	English	1
About	Searching Time:	5	(5 ~ 30 sec.
(Searching Address: 	10 . 1 . 20 . 13	+
	[V] Automatically a Time Period :	earching and connecting device	(1~5 min.
	Connecting to to login name	he device later with the specified n	ame instead of
	Specified Name:	AV00365	

- Searching Time: When the program is launched, it automatically searches the scanner in the network in 5 seconds (default). The searching time can be changed from a range of 5 to 20 seconds.
- If the [Virtual Scanner Link] program has been closed and then launched again, [Virtual Scanner Link] will automatically search and connect the network scanner it has previously connected to.

- The connection is always enabled, whether the scanner enters into the sleeping mode or turns off and on again.
 VSL will automatically detect the previously connected scanner and connect again.
- [Automatically searching and connecting device]: Check this option and enter your time (1~5 min.) to allow the VSL to reconnect to the device every specified minute(s) if the device has been woken up during sleep mode or the device has been turned off and on again.
- [Connecting the device with a specified name instead of a login name]: Check this option and enter your desired name for the computer. Yet you need to reconnect the device again to refresh the status.

2.9 How to Switch to Another Computer on the Network Scanner

Please follow these steps to connect the network scanner to other computer in the network:


- 1. Turn on the scanner.
- Make sure that a LAN (Ethernet) cable has been connected to the scanner and that the Virtual Scanner Link (VSL) has been installed to your computer. (Refer to the preceding section 2.3~2.7)
- On your computer, start [Virtual Scanner Link] by choosing Start>All Programs>Avision Virtual Scanner>Virtual Scanner Link. The main window will be displayed and the scanners in your network will be searched automatically.
- 4. In VSL main window, connect the scanner.
- 5. Open Button Manager 2 by choosing Start>All Programs>Avision Button Manager.
- 6. A list of computers (login names) connecting to the scanner will be displayed.

1. PC 1
2. PC 2
3. PC 3
J. PC J
4. PC 4

 Use the Arrow key to select the computer you want to connect and then press (Scon) (OK). The Button Panel will be displayed.



- Use the Arrow key to select your desired Button No. or destination and then press (OK).
- 9. The scanner starts feeding your paper and the scanned image will be sent to your specified application or destination.

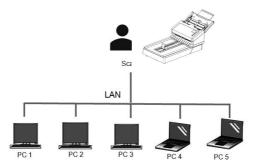

2.10 How to Block Other Users from Using the Network Scanner

Please follow these steps to temporarily prevent other users from using the network scanner:

- 1. Make sure that a LAN (Ethernet) cable has been connected to the scanner and that the Virtual Scanner Link (VSL) has been installed to your computer. (Refer to the preceding section $2.3 \sim 2.7$)
- On your computer, start [Virtual Scanner Link] by choosing Start>All Programs>Avision Virtual Scanner>Virtual Scanner Link. The main window will be displayed and the scanners in your network will be searched automatically.
- 3. In VSL main window, connect the scanner.
- Open Avision Capture Tool by choosing Start>All Programs>Avision XXX Scanner>Capture Tool. Select the scanner model and then the main window will be displayed.



5. Click the Scan button (or choose Scan from the File menu. The following screen will be displayed on the scanner panel. This screen indicates the scanner is temporarily locked by a specific user.



6. Press (Scan button), the paper starts feeding into the scanner and the scanned image will be displayed.

NOTE:


- The timeout for the lock status is 60 seconds.
- If you wish to cancel the lock status within timeout, press the Cancel button on the scanner.

2.11 How to View Scanner's Detailed Information


1. On the scanner, press ∇ (Down arrow) to select [More Settings] and then press (OK) to confirm. The screen including [Wi-Fi], and [Information] option will be displayed.

2. Select [Information], and press (OK), and then choose your desired option. The information about the option will be displayed as indicated.

Scanner Information:

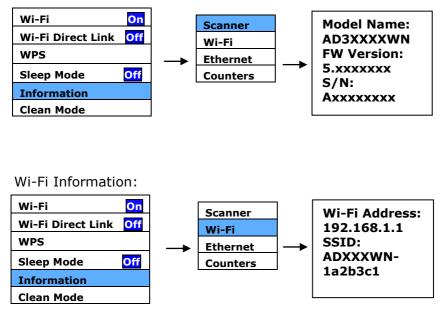


Ethernet Information:

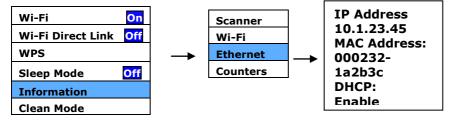

Counter Information :

Counter : The scan count of ADF roller, Reverse Roller, and Pickup Roller

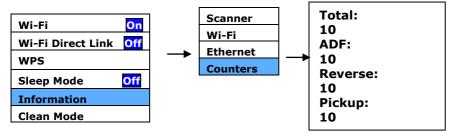

2.12 How to Change the Scanner's IP Address and Device Name

 Start [Virtual Scanner Link] by choosing Start>All Programs>Avision Virtual Scanner>Virtual Scanner Link. The main window will be displayed and the scanners in your network will be searched automatically.

Vendor	Model Name	 Device Name 	MAC Address	IP Address
		Avision-014685	000232014685	10.1.20.17
Avision	ADXXX	Avision-01403A	00023201403A	10.1.20.74

2. Click the scanner's IP address as indicated. The scanner's web page will be displayed.

/irtual Scanner Li	nk			_ 0 <mark>_ X _</mark>	Avisio	n			
Virtual Sca	inner Link	[Refresh	1 dona	WebManager.				
Vendor	Model Name	- Device Name	MAC Address	IP Addgess	Mree	Information			
				10.1.20.171		Scenter			
Avision	ADIOX	Avision-01403A	00023201403A	91 20.74		Photo Name	AD3559WN	Revenue Roller Court:	244
				_		Host Name:	403359/19-014442	Pick-up and Separation Roller Count:	244
						First Scart	2020/4/21	ADF Rolar Court	244
						Serial Number:	8098182001450001	ADF Simplex Count:	22 222
						Firmivere Version:	0.43	AD# Duplex Count:	222
						Barn Detei Rover On Timei	2020/5/5	PhiltiPaed Count:	0
						Power On Times	#2%(4) \$2min(4)	Jam Court: Optice Resolution:	0
								Beckground:	600 White Beckground
	Comm	et Disconnect	1			Industri			
						Wired		AP Mode	

 Please login first with the default user name and password – [admin]. Click [Network] and then [Wired]>[Next] to enter your specific IP address or change the device's host name. Finally click [Next]>[Export] to complete.

Menu						
Information	Choose the desir	ed setting	gs			
Network						
	Wired					
	○ Wireless (Clier	nt Mode)				
	O Wireless (AP M	(Iode)				
	○ Wired + Wirel	ess (AP N	(ode)			
	OFF All Netwo	ork				
Menu						
Menu Information	Device Setting					
Information	Device Setting Host Name:	AD3X	XXWN-12	2345		
		AD3X	XXWN-12	2345		
Information	Host Name:	AD3X	XXWN-12	2345		
Information	Host Name: Wired settings		00000-12	. 23	v]	
Information	Host Name: Wired settings DHCP:	ON				
Information	Host Name: Wired settings DHCP: IP Address:	ON 10)[1	. 23	. 98	
Information	Host Name: Wired settings DHCP: IP Address: Subnet Mask:	ON 10 255 10 • Ot	. 1 . 255 . 1 otain DNS	. 23 . 255 . 23 s server ac	. 98 . 0 . 254 Idress auton	
Information	Host Name: Wired settings DHCP: IP Address: Subnet Mask: Gateway IP:	ON 10 255 10 © OE Us	. 1 . 255 . 1 otain DNS e the follo	. 23 . 255 . 23 Server ac owing DN	. 98 . 0 . 254 Idress auton IS server ad	
Information	Host Name: Wired settings DHCP: IP Address: Subnet Mask:	ON 10 255 10 • Ot Us 10	. 1 . 255 . 1 otain DNS	. 23 . 255 . 23 s server ac	. 98 . 0 . 254 Idress auton	


NOTE:

You may also use the webpage to change your connection type, authentication method, or connect to other access point or router which supports the WPS connection.

3. Completing Your First Scan

3.1 Placing Your Document on the Flatbed

Open document cover. Place your document **FACE DOWN** on the document glass and align the document to the reference mark as indicated. Close document cover.

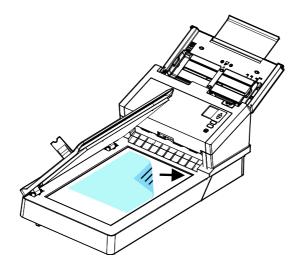

3.2 Loading Your Document in the ADF Paper Tray

3.2.1 Notice on Using the ADF

Before using the ADF, please make sure that your paper meets the following specifications:

- Document (s) can range in size from 50 x 50 mm (2 x 2 in.) to 242 x 356 mm (9.5 x 14 in.).
- Document (s) can range in weight from 27 \sim 413 g/m² (7 \sim 110 lb.)
- ID cards up to 1.25 mm thick
- Plastic cards compliant with the ISO7810 ID-1 type
- Document(s) should be square or rectangular and in good condition (not fragile or worn).
- Document(s) should be free of curl, wrinkle, tears, wet ink, or punch holes.
- Document(s) should be free of staples, paper clips, paper sticky notes.

Fanning Your Document


NOTE:

To avoid occasional multi-feeds or paper jams, please fan your documents and align the top edges before feeding them into the scanner.

1. Hold both ends of the documents and fan them a few times.





- 2. Rotate the documents by 90 degrees and fan them in the same manner.
- 3. Align the edges of the documents in a step-like pattern (see picture below).

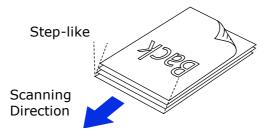


Document Feeding

- 1. Unfold the document feeder and its extension.
- 2. Raise the paper stopper.

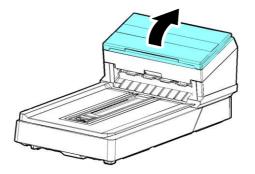


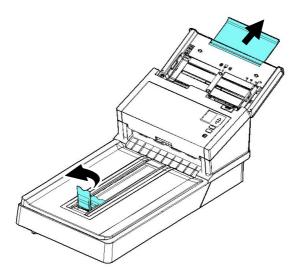

3. Raise the paper guide to hold your multi-page document.

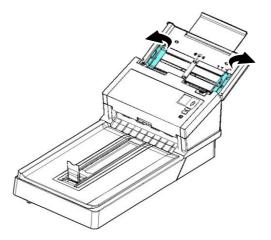

4. Load the stack of document face down with the top of the pages pointing into the feeder.

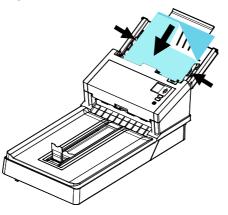


5. Verify that the paper guides are aligned with the edges of the stack.

Note: The [Paper Width] switch:

If your document width is 216 mm (8.5 in.): Slide the [**Paper Width**] switch **DOWN** to fix your paper guide to conveniently load the letter-size document.

If your document width is larger than 216 mm (8.5 in.):


If your document width is larger than 216 mm (8.5 in.) such as invoices with punch holes, slide the [**Paper Width**] switch **UP** and move the paper guide to the right end to load your documents.

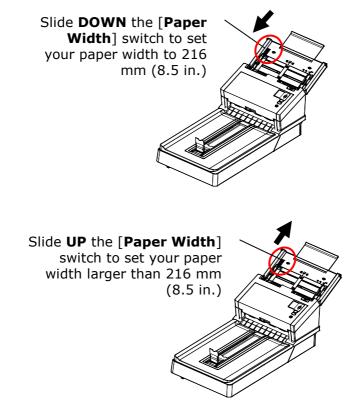


3.2.2 Scanning a Stack of Document with Various sizes and Weights

When scanning a batch of documents with different sizes and weights, be sure to follow these guidelines to avoid a skewed image or a paper jam:


1. Align the documents **TOP EDGE** first in the sequence of paper size from large to small.

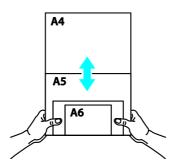


2. If two pages are of the same size yet with different weight, arrange these pages in the sequence of paper weight from heavyweight to lightweight.

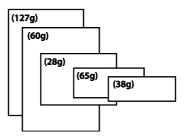

3. Align the edges of the documents by tapping the bottom of the stack against the table top.

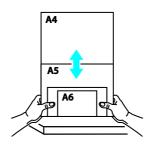


 4. Center these pages in the document feeder and make sure that the edges of page of the largest size slightly touch the Paper Guide.



3.3 Using the Paper Stopper

Raise the Paper Stopper and slide it to the right or to the left according to the paper size you are loading from the auto document feeder. The paper stopper is used to arrange your document so the paper can be neatly collected after scan.

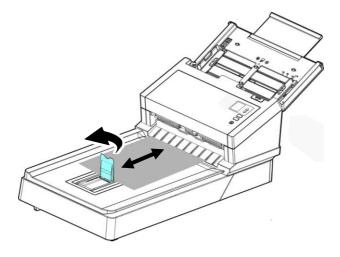


3.4 Verifying Your Scanner Installation

To verify if your scanner installation is correct, Avision provides you a useful test program called Avision Capture Tool. With this tool, you can perform simple scans and view the captured images. In addition, it helps you complete your scan at a rated speed.


The following procedure describes how to verify your scanner installation. If the installation is not correct, please review the preceding section to check if the cable connection and scanner driver have been successfully installed.

Before you begin, be sure the scanner is on.

1. Select Start>Programs>Avision xxx Scanner>Avision Capture Tool. The Select Scanner Model dialog box will be displayed.

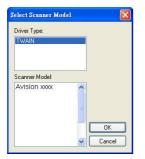

2. Select your driver type and scanner model and click OK. The following Avision Capture Tool dialog box will be displayed.

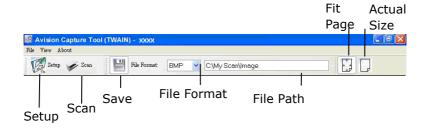

- 3. Choose your desired file format from the File Format drop down list box. (Default is JPEG, other choice includes TIFF, MTIFF, PDF, MPDF, GIF, and BMP.) The supported file formats vary depending on your scanner model.
- 4. Type your desired folder name and file name in the File Path box. (Default is C:\Documents and Settings\User Name\My Documents\My Scan\Image.)

NOTE:

- If you do not wish to save the scanned image, deselect the Save button since default is Save Enable. In this case, the thumbnail view will be disabled. And therefore, after viewing all the scanned images, only the last one will remain on the screen.
- 5. Click the Setup button (^{Setup}) or choose Setup from the File menu to prompt the Scanner Properties dialog box.

	Scanner Properties	1		
Image Selection Box	Front Auto Color Detection Front Color Front Gray Front BAW Front	Binatzation: Senativity: Brightness Contrast: Resolution (dpi): Invert:	Dynamic Threshold	• • • •
	Same settings for both sides Scan Source Profiles	Auto Document Feede	•	K Cancel

- 6. From the Image Selection Box, choose your desired image type for your scanned image. (Default is Front B&W) If you have a duplex scanner, choose Front and Rear to scan both sides of your document.
- 7. Click OK to quit the Scanner Properties dialog box. (To learn more details about the Scanner Properties dialog box, please see the subsequent chapter, *Using the Scanner Properties Dialog Box*.)
- 8. Place your document face down on the document glass or face up in the auto document feeder.
- 9. In the Scan Validation dialog box, click the Scan button

(Scan) or choose Scan from the File menu.

10. The document will be scanned and displayed in the Scan Validation screen. After the scanned images have been displayed, your scanner installation verification is completed.

Cap ture Tool (TWAIN) -	XXXXX			
🐼 Setup 🍃 Scan	File Format:	JPEG 💌 C:(My ScanVmage)
	Thirty-one shelves. Wha are th Friends, No. Reveneed, I. Reveneed, I. House,	I on puffs of chimney anoide. In four days called, Sampunde with whitewy, baak on ey for? I encessarily neighbor friends: Indeed, II persons we've most maybe once, perint of Mes. J. C. Low, Satagitt missioners of Mes. J. C. Low, Satagitt missioners on Neica a year. Or Althor Rader, the dr from Hobie, we occlude should be a strain a dual-tobule should be a strain a dual-tobule should be a strain part of the strain of the strain of the patients have retengy with us on the p retention of the strain of the strain of the patients have retengy with us on the patient have retengy with us on the patient have retengy with us on the patient for the strain or the strain of meets acquisitizances, seen to thank to the strain of the strain of the strain of the strain of the strain of the strain the retension of the strain of the strain patient for the strain of the strain of the strain of the strain of the strain of the patient fields, where the cost of strains is the strain of the strain of the strain of the strain of the strain of the strain of the strain strain of the strain of the strain of the strain of the strain of the strain of th	windowsilis and winicowsilis and principal and a second second second to bornow who here comes wer of the six us awary day as toma, a California us awary day as toma, a California us awary day as to	
Thum	bnail Vie	יאיב	I	Display View
mann				

11. You can view the scanned image in Fit Page () or Actual Size (100%) button () from the Viewing toolbars at the

right side.

12. Click the Close box or Quit from the File menu to exit the Scan Validation Tool.

Front Auto Color Detection	Binarization:	Dynamic T	hreshold	•	
Front Color	Sensitivity:	20	(۲
Front Gray Front B&W	Brightness:	0			
Rear Auto Color Detection	Contrast:		(+
Rear Color	Resolution (dpi):	200 Black on V	/hite	•	
Rear Gray Rear B&W					
Same settings for both sides Scan Sour	ce: Auto Document Feede	ər	-		
Profiles	Custom		•		


3.5 A Glance of the Scanner Properties Dialog Box

1. Tab Options	Choice: Image, Compression, Color Dropout, Paper, Multi-Feed Detection, Preview, Options, Settings, Information.
2. Image Selection Box	Choose your image type and the side of document you wish to scan. Options vary based on type of scanner.
3. Brightness	Adjust the brightness level from -100 to $+100$.
4. Contrast	Adjust the contrast level from -100 to $+100$.
5. Resolution	Determine the quality of the scanned image. The industry standard is 200 dpi.
6. Invert	Reverse the color of your scanned image.
7. Scan Source	Choice: Auto Document Feeder, Flatbed, Flatbed (Book), Automatic (varies due to different scanner model)
8. Defaults	Reset all values on the tabs to the factory default settings.

3.6 How to Scan and Save Your Image to a USB Flash Drive

To start a scan and send the scanned image to an inserted USB flash drive,

- 1. Load your document in the ADF with the 1st page facing down and the top of the pages pointing to the feeder.
- 2. Insert a USB flash drive to the flash drive port. The following **[Scan to USB]** option will be displayed.

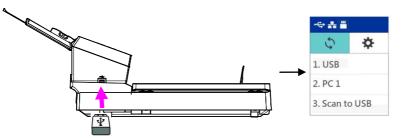

3. Use the arrow key to choose [**Scan to USB**] and then press the [Scan] button (OK). The following default setting screen appears.

-🗢 🏭 🚆	
Default settin	g
Gray	200 dpi
Color	200 dpi
Gray	300 dpi
Color	300 dpi
Gray	600 dpi

4. Use the arrow key to choose your desired color mode and resolution (Choice: Gray 200 dpi, Color 200 dpi, Gray 300 dpi, Color 300 dpi, Gray 600 dpi, Color 600 dpi) and then press the Scan button (OK). The following [**File format**] screen will be displayed.

·<> 👬 🚆
JPEG
PDF
TIFF

 Use the arrow key to choose your desired file format (choice: JPEG, PDF, TIFF) and then press the [Scan] button (OK). The scanner starts scanning your document and storing the image to your USB flash drive.

4. Using the Scanner Properties Dialog Box

The Scanner Properties dialog box allows you to configure the scanner's settings. It consists of several tabbed windows each of which will be described in this chapter.

NOTE:

In this chapter, all options are available based on a duplex (double-side) scanner. If you have purchased a simplex (single-side) scanner, all options are available for single sided only.

age Paper Setting Informa	ation				
Front Auto Color Detection	Binarization:	Dynamic	Threshold	•	
Front Color	Sensitivity:	20	•		۲
Front Gray Front B&W	Brightness:	0	4		F
	Contrast:		•		۲
Rear Auto Color Detection	Resolution (dpi):	200		•]	
Rear Color					
 Rear Gray Rear B&W 	Invert:	Black on	White	•	
			White		
Rear B&W Same settings for both sides	rce: Auto Document Feede			T	
Rear B&W	rce: Auto Document Feede		•	•	
Rear B&W	rce: Auto Document Feede		•	•	
Rear B&W	rce: Auto Document Feede		•	•	
Rear B&W Same settings for both sides Scan Sou	rce: Auto Document Feede		•	•	

The Scanner Properties dialog box

Front Auto Color Detection	Binarization:	Dynamic	Threshold	•	
Front Color	Sensitivity:	20	<		۲
Front Gray]				
Front B&W	Brightness:	0	4		+
The state of the s	Contrast:		*		۲
Rear Auto Color Detection	Resolution (dpi):	200		•	
Rear Color		Black on			
Rear Gray	Invert:	Black on	White	•	
Rear B&W	1				
Same settings for both sides Scan Source	e: Auto Document Feede	r	•		
Profiles	Custom		•		

4.1 Buttons on the Scanner Properties Dialog Box

The buttons on the Scanner Properties dialog box

Buttons	Description
Defaults	Click the Defaults button, the factory default settings will be shown on each tab.
Cancel	Click the Cancel button to leave the Scanner Properties dialog box.

The following table shows the default settings :

Tab name	Default settings
Image	Image : Front B&W
	Binarization : Dynamic Threshold
	Resolution : 200 dpi
	Invert : Blank on White
	Scan Source : Auto Document Feeder
	Threshold : None
	Brightness : None
	Contrast : None
Compression	None
Color Dropout	None
Paper	Cropping : Automatic
	Deskew : Yes
	Orientation : Portrait
	OverScan : 0.00
	Note: The availability of this option
	varies due to scanner model.
	Unit : Inch
Multi-Feed Detection	None
Preview	None
Options	Rotation Degrees : None
	Blank Page Removal : None
	Edge Fill : White , 0 mm
	Image Control Option : None
Setting	Enable Energy Saver : Enable, 15
	minutes after last scan action
	Show Scanning Progress : Yes
	Show Warning Message : Yes
	Save Settings after Closing : Yes
Imprinter	Digital Imprinter

4.2 Showing or Hiding Tabs

The [**Scanner Properties**] dialog box is displayed in default with three basic tabs - Image, Paper, and Information. To show more tabs, click the [**Scanner Properties**] icon to access more scan settings.

To show more tabs,

- Click the [Scanner Properties] icon () on the upper left corner, and choose [Tab] to show available tab names. The available tabs include Compression, Color Drop out, Preview, Rotation, Separation, Multi-Feed, Options, Settings, and Imprinter. (Note: the options vary based on scanner model.)
- Choose the tab you want to display. The selected tab will be shown with a check mark and then displayed in the [Scanner Properties] dialog box.
- **3.** To access the settings, click the selected tab on the top of the [**Scanner Properties**] dialog box. The page of the selected tab will be displayed.

To hide a tab window,

- 1. Click the [Scanner Properties] icon () on the upper left corner, and choose [Tabs] to show available tab names.
- 2. Choose the tab you want to hide. Then, the selected tab will be hided in the [Scanner Properties] dialog box.

Note: The [**Image**], [**Paper**], and [**Information**] tab can not be hided since they preprogrammed to be displayed by default.

Tabs •	Compression Color Dropout	-			
Close Alt+F4	Multi-Feed Detection)ynamic	Threshold	•	
Front Color	Preview Rotation Separation	20	•		4
Front B&W	Enhancement Setting		4		Þ
Rear Auto Color Detec	Imprinter	00		•	
Rear Color					
Rear Gray	Invert:	Black on	White	•	
-					
Rear B&W					
Same settings for both sid	des Source: Auto Document Feed	er	•		
Same settings for both sid	Source: Auto Document Feed	er	•		
Same settings for both sid	Source: Auto Document Feed	ar	•		
Same settings for both sid	Source: Auto Document Feed	f 	•		

4.3 The Image Tab

The Image tab allows you to choose the front side and (or) the rear side of your document, the type of image, and to set several basic scan settings. Note that except for the resolution, you can set individual scan settings for the front side and the rear side. For example, all settings in the Image tab, Compression tab, Color Dropout tab can be set individually for the front and the rear side. However, the settings in the Paper tab, the Option tab, and the Setting tab have to be set the same for the front and rear side.

	C	200		
Binarization:	Dynamic	Threshold	•	
Sensitivity:	20	•		۲
Brightness:	0	4		Þ
Contrast:		4		۴
Resolution (dpi):	200		•	
	[P 1	14.0		
Invert:	Black on	White	•	
urce: Auto Document Feede	ส	•		
Custom		•		
	Sensitivity: Brightness: Contrast: Resolution (dpi): Invert:	Sensitivity: 20 Brightness: 0 Contrast: 200 Invert: 200 Invert: Black on Invert: Black on	Sensitivity: 20 < Brightness: 0 < Contrast: 4 Resolution (dpi): 200 Invert: Black on White rce: Auto Document Feeder	Sensitivity: 20 Brightness: 0 Contrast: Resolution (dpi): 200 Invert: Black on White


The Image tab dialog box

4.3.1 The Image Selection Box

Front Auto Color Detection	-
Front Color	li
Front Gray	,
Front B&W	1
Rear Auto Color Detection	1
Rear Color	
Rear Gray	!
Rear B&W	

The Image Selection box includes the image type and document side option. If you wish to scan both the front side and the rear side of your color document, you can check both Front Color and Rear Color at the same time. Note the options vary based on type of scanner.

Example 1 : Scanning a two-sided color document, both sides in color

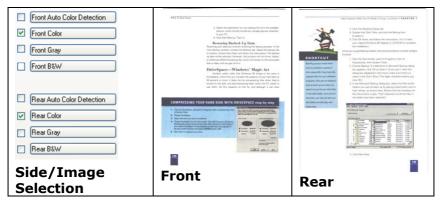

Example 2 : Scanning a two-sided color document, one in B&W, the other in color


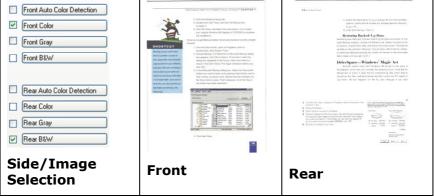


Image Type	Description
Color	Choose Color if you wish to scan a color image for your original in color.
Gray	Choose Gray image if your original contains actual shades of gray.
B&W	Choose B&W if your original contains only text, pencil or ink sketch.

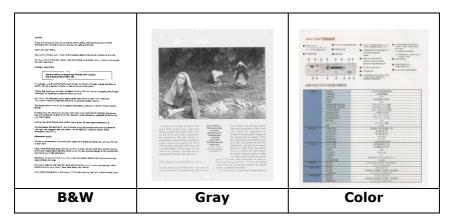

Front/Rear Auto Color Detection:

Click to automatically detect and scan the front or the rear page of your color document in color image mode. If your document is in colors, the scanner will automatically scan the document into a color image. If your document is non-color, you can choose the output to be either B&W or Gray from the Non-Color Selection option. This option is useful when you have a mixture of color and non-color document.

Note: If you choose Front Rear Auto Color Detection, you can not specify the image mode of your rear page and vice versas.

Modes of Auto Color Detection:

If [**Front/Rear Auto Color Detection**] is selected, its modes will be displayed. **Choice includes Normal, Ignore Paper Color.** For paper with background color such as invoices, choosing [**Ignore Paper Color**] will automatically remove the background color and enhance the detection accuracy.


Normal	Ignore single background color
	DECOMPOSITION OF THE DECOMPOSI

Sensitivity of Auto Color Detection

If your documents contain primarily B&W text and small amount of light or pale colors and you do not wish them to be recognized as color image to save the file size, you can increase the sensitivity value by moving the bar to the right to let these images to be detected as B&W. The value ranges from 1 to 100. The default is 37.



Original

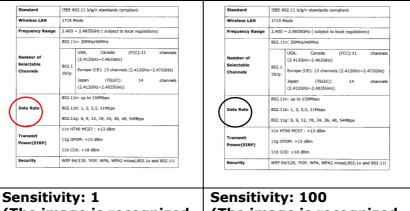

Sensitivity: 1Sensitivity: 100(The image is recognized
as a color one)(The image is recognized
as a black and white one)

Same settings on both sides:

Click to apply same scan settings for both sides of your documents. After checking this option, any settings you have changed will automatically applied to both the front side and the rear side. For example, if you choose your ideal resolution to be 300 dpi, this will be applied both to the front side and rear side of your document.

4.3.2 Other Image Options

Binarization This is the process of converting a grayscale or color image to a bi-tonal image. There are several different methods of performing this conversion. Options: Dynamic Threshold, Dynamic Threshold (AD), Fixed Processing, Halftone 1~5, Error Diffusion.

Dynamic Threshold: Selecting **Dynamic Threshold** allows the scanner to dynamically evaluate each document to determine the optimal threshold value to produce the highest quality image. This is used to scan mixed document containing faint text, shaded background, or color background with a single setting. If Dynamic Threshold is selected, Threshold, Brightness, and Contrast are not available.

Dynamic Threshold (AD): Selecting **Dynamic Threshold (AD)** to perform the enhanced mode of the Dynamic Threshold feature. However, using this mode may slow down your scanning speed.

Sensitivity of Dynamic Threshold

Occasionally your scanned image may contain small dots or speckles. To remove these spots, increase the sensitivity value by moving the bar to the right. The value ranges from 1 to 30. The default is 20. **Fixed Processing:** Used for black-andwhite and other high contrast documents. A single level is set to determine the blackand-white transition. The threshold is programmable over the entire density range. **Fixed Processing** sets Contrast to 0. If **Fixed Processing** is selected, Contrast is not available.

Halftone: In addition to the black and white display, Halftone can present a somehow gray shade of image by using different size of dots. Halftone image looks like the picture we have seen in the newspaper. Options include Halftone 1, Halftone 2, Halftone 3, Halftone 4, Halftone 5.

Error Diffusion: Error Diffusion is a type of Halftone. Error Diffusion gives good image texture and makes text in images more readable than Halftone.




Halftone Image



Dynamic Threshold Dynamic Threshold (AD)

Threshold Used to convert a grayscale image to a bi-tonal image. The value ranges from 0 to 255. A low threshold value produces a lighter image, and can be used to subdue backgrounds and subtle, unneeded information. A high threshold value produces a darker image, and can be used to help pick up faint images. Adjust the threshold setting by dragging the

Threshold sliding bar to the left or right to achieve the desired threshold setting.

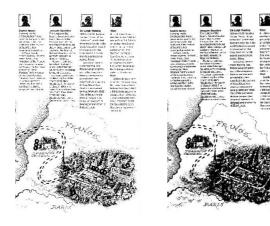

200 dpi, Threshold:50, Brightness: 0

200 dpi, Threshold:100, Brightness: 0

Gray

Document Type: Choice: Normal, Photo, Document Three options of document type are provided when you choose Gray as the image type for your scanned document. **Choice: Normal, Photo, Document.**

- **Document:** Choose Document if your original contains pure text or a mixture of text and graphic since it is an optimal setting for regular business document. When using Document, only Threshold can be adjusted.
- **Photo:** Choose Photo if your original contains photo to reproduce your photo in vivid grayscale image. When using Photo, no Threshold and Contrast can be adjusted.
- **Normal:** When using **Normal**, Threshold, Brightness, and Contrast can be adjusted.

Threshold: The value ranges from 0 to 255. The default is 230. A low threshold value produces a lighter image, and can be used to subdue backgrounds and subtle, unneeded information. A high threshold value produces a darker image, and can be used to help pick up faint images. Adjust the threshold setting by dragging the **Threshold** sliding bar to the left or right to achieve the desired threshold setting.

	 Technologic Mark Staffer, S. S.
Income taking time	Failed and addressment house
- MINOR	C21 Figh (#165
Dated and dow	60 da
Augusta addat	4.5.5 To PM
1.0.00	a limit a \$4 dash-174 x \$28 mm;
ACT was player state.	A DOMESTIC ADDRESS OF A DOMESTIC
with their paper and	
Patterney years and	A Count of 17 Mill Auto (27 C a 200 (1972)
AP parties	1010-17 (mpt) 975 - 1015 - 2016-985
Charles Company	001401-00408
An age at strength of	64
	100 Mile 101 Mile
Demonstration and	
	K 42 Contravelle 20-per, 1984 popp, 71mm
Are 214 101	E Chen
- Date-Sold (1993)	E CPM
STATUS POST	table solars
Copy we work	102-400
	Hi sarra
No. of Concession, Name	LO-N-12 FEM
Care and Name	Back 22,75%
- MAN gree scent	R. M.
Fire-19 /6.2016	
Part Middler	665
Prose to all the	Wite trans Miller (Wite entern, 2000, 2001, 147
Manual contraction and	1.500 uppel
Convenient Dischart	Advances highing hit internet of advancementation
	NUMBER AND AND AND
Provent and	SHIT WHE PUTS
Terrareles and	
Colonia .	THE AND NOT MANAGEMENT
	THE JACK VEY HIGH WE STEEL

Normal

 Institutes Institutes Institutes Institutes 	• 100 1 00 100 100 100 1000	 Inscission to compare of the base of states and there is a state of the base of the base of the base of the states of the base of the base of the base of the base of the states of the base of the base of the base of the states of the base of the base of the base of the base of the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the base of the base of the base of the the base of the base of the the base of the base of t	 The product of the second secon
 Test's date tax calls 	 And is depictioned product of order sorting room 	And to an other property set for some the strategy set of setting to be a site of the set of setting setting and the set of setting setting the set of setting setting and setting and setting setting setting and setting setting and setting	No.1(1) No. phase into a baselin mini ta validate el territorita de activi- taria de la calencia de la calencia de la calencia de la calencia de la calencia de la calega de al calencia de la calencia a calencia de la calencia de la calencia de la calencia a calencia de la calencia de la calencia de la calencia a calencia de la calencia de la calencia de la calencia a calencia de la calencia de la calencia de la calencia a calencia de la calencia de la calencia de la calencia a calencia de la calencia de la calencia de la calencia a calencia de la calencia
1111		President and the second secon	 Contraction for effort of the first of the set of the
		Anno 12 channess ann ann Anno 23 channa ann ann ann ann Anna 23 chann ann ann ann ann Anna 24 channa	



	AUM	
	ACP and pages size	45 Petro 53 mp (19 4 a 19 mm)
		\$5 YO T & T BE MAD IT TO A NEW YORK
	AG4 controls	
		HT-3/5. 295-805
		SLAR BUG DEER ME DEE
	maph maph	
Sex com	Preventering	Concentration (Desco, MAN yearing 17am)
		12/074
		(PT: 4305)
Association .	MAN protogenet	18 to 20 PPH
	Nation of State	
	Promer beigunge	1.000 10040 203
	Report support	

Document (Threshold: 230)



Normal




Photo



Document (Threshold: 230)

Brightness Adjusts the lightness or darkness of an image. The higher the value, the brighter the image. Drag the slider to the right or left to increase or decrease the brightness. The range is from -100 to +100.
 Contrast Adjusts the range between the darkest and the lightest shades in the image. The higher the contrast, the bigger the different grayscale. Drag the slider to the right or left to increase or decrease the contrast. The range is from -100 to +100.

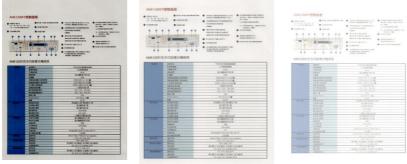


Brightness: -50

Brightness: 0 (Normal) Brightness: +50

ANISTZONET	STATES.		
**		 Control Real Procession <l< th=""><th>Control of the second sec</th></l<>	Control of the second sec

Contrast: -50

Contrast: 0 (Normal)

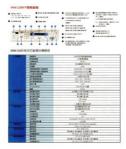

Contrast: +50

Resolution A good control of the resolution results a good detail of an image that scans. The resolution is measured by dots per inch (dpi). Normally, the greater the dpi number, the higher the resolution and the image file size. Be aware that greater resolution takes more time to scan, and more disk space for the scanning image. For your information, an A4 size color image scanned at 300 dpi at True Color mode consumes approximately 25 MB of disk space. A higher resolution (usually means over 600 dpi) is only recommended when you need to scan a small area at True Color mode.

Choose a resolution value from the drop down list. The default value is 200 dpi. Available resolutions are 75, 100, 150, 200, 300, 400 and 600. Or you may choose your desired value by clicking the box in the right side of the drop down list and press the arrow key to select your desired value and then click the Add button to include it in the drop down list. **Note:** The resolution is up to 300 dpi if an imprinter or a MICR reader is installed or connected to the scanner.



Resolution: 75 dpi



Resolution: 150 dpi

Invert Reverses the brightness and the colors in the image. The default setting is Black on a White background. Reverse mode is White on a Black background. For color images, each pixel will be changed into its complementary color at the command of Invert.

"I am not worthy to have you enter my

that is God, I beg all my brothers - those w e who work manually, clerics and lay brothers ards being humble in all things; not to glorify r to become interforly proud because of good w sometimes says or does in them or through tl ord: "Do not rejoice... in the fact that the de : 10:20) Let us be firmly convinced of the fact

Black on White

"I am not worthy to have you enter my

that is God, I beg all my brothers - those v e who work manually, clerics and lay brothers rds being humble in all things; not to glorify to become interforly proud because of good w sometimes says or does in them or through rd: "Do not rejoice--- in the fact that the de 10:20) Let us be firmly convinced of the fac

White on Black

Scan Choice:

- **Source** Auto Document Feeder: Used to scan multiple pages.
 - **Flatbed:** Used to scan a single page. For example, pages from newspaper clipping, paper with wrinkles or curls.
 - **Flatbed (book):** Used to scan several inside pages from book.
 - Automatic: Allow the scanner automatically set its scan source. If Automatic is selected and there is document in both the auto document feeder (ADF) and the flatbed, then the scan source will be automatically set to ADF. If Automatic is selected and there is document only in flatbed, then the scan source will be set to flatbed.
 - Merge Two Sides into One Image: If you have a sheet-fed duplex scanner with front input tray, you can scan an A3 size document with an innovative method. Thus, fold your A3 size document into A4, and then load the paper in the front tray. Choose Merge Two Sides from the Scan Source option and then the scanner is able to scan both sides of your document and merge two A4 images into one A3 image.

When you select Merge Two Sides into One Image, the Cropping or Multi-feed function will be disabled.


Note: This feature must be used with a carrier sheet. Regarding how to load a document with a Carrier Sheet, refer to Section 4.6.2, Other Paper Selection.

Note the options vary based on type of scanner.

NOTE:

If you have purchased a duplex sheet-fed scanner, choose [Merge Two Sides] on the [Scan Source], then the scanner is able to scan both sides of your document and merge them into a single image.

If "Merge Two Sides into One Image" is selected, its choice will be available including "Merge Horizontally", "Merge Vertically", "Merge Vertically (Back Side Flip)". If the reverse side of your document is upside down, choose "Merge Vertically (Back Side Flip)" and the back side will be automatically rotated 180 degrees and merged.

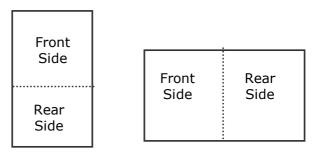

Merge Vertically

Merge Horizontally

Note the options vary based on type of scanner.

Color Matching

The purpose of Color Matching is getting the accurate color. This option uses the default parameters (ICC profile) to adjust the colors of the image.

Choice: None, Document, Photo

- None: Choose "None" to disable this option.
- **Document:** Choose "Document" if your original contains pure text or a mixture of text and graphic since it is an optimal setting for regular business document.
- **Photo:** Choose "Photo" if your original contains photo to reproduce your photo in vivid color image.



Normal



After Color Matching

4.3.3 Scanning color images

The following options are available for scanning color images.

- Brightness
- Contrast
- Resolution
- Invert

4.3.4 Scanning grayscale images

The following options are available for scanning gray images.

- Brightness
- Contrast
- Resolution
- Invert

4.3.5 Scanning B&W images

The following options are available for scanning B&W images.

- Binarization (Dynamic Threshold)
- Resolution
- Invert

Or

- Binarization (Fix Processing)
- Threshold
- Brightness
- Resolution
- Invert

4.3.6 Editing Profiles


The Scanner Properties dialog box allows you to change and save your frequently used scan settings into a profile. You can edit these profiles by renaming or deleting them.

To add a new profile,

- 1. Customize your settings. (For example, change your resolution, image type, cropping method, scan size, or other scan settings.)
- 2. Click the Image tab and then choose "Profiles" to prompt the "Edit Your Profile" dialog box.

Scanner Properties						
Image Paper Setting Information	an					
Front Auto Color Detection	Binarization: Sensitivity:	Dynamic Threshold	-			
Front Gray	Bighmess Contrast:	0 *				
Bear Auto Color Detection	Resolution (dpi):	200	Edit Your Profile			
Rear Gray	Invert:	Black on White	Profile:	Duplex, B&&W, 200 dpi	Add Rename	Delete Reset
Same settings for both sides Scan Source Profiles	e: Auto Document Feeder	•				Exit
Detaulte		0	: Cancel			

 3. Click "Add" to enter the name of the profile and then choose "Save".



4. The new profile will be saved and shown in the "Profiles" dropdown list box.

To load a profile,

1. From the Image tab dialog box, choose your favorable profile from the "Profiles" dropdown list box.

ofile:	Duplex, B&&W, 200 dpi	Add	Delete
	Duples, R8XV/ 200 dpi Duples, Color, 200 dpi Duples, Gray, 200 dpi Simples, R8XW/, 200 dpi Simples, Color, 200 dpi Simples, Gray, 200 dpi	Rename	Reset

2. Your favorable profile will be immediately loaded and displayed on Scanner Properties dialog box.

To delete a profile,

1. From the Image tab dialog box, click "Profiles" to prompt the Edit Your Profile dialog box.

it Your Profile			
Profile:	Flatbed	• Add	Delete
		Rename	Reset
			Exit

- 2. Choose the profile you want to delete from the dropdown list box.
- 3. Click "Delete". A Confirm message "Are you sure you want to delete this profile?" is prompted.
- 4. Choose "Yes" to delete or "Cancel" to quit.

To rename a profile,

1. From the Image tab dialog box, click "Profiles" to prompt the Edit Your Profile dialog box.

ofile:	Betsy	Add	Delete
	Duplex, B&&W, 200 dpi Duplex, Color, 200 dpi Duplex, Croy, 200 dpi Flathed Simplex, B&&&W, 200 dpi Simplex, Color, 200 dpi Simplex, Gray, 200 dpi	Rename	Reset

- 2. Choose the profile you want to rename from the dropdown list box and then click the Rename button.
- 3. Enter new name for the profile.

Rename a Profile	×
Please enter the new	name of the profile:
Original Name:	Betsy
New Name:	
	Save Cancel

4. Choose "Save" to save the new profile or "Cancel" to quit.



- The preset default profiles include Flatbed, Simplex-B&W, 200 dpi, Simplex-Gray, 200 dpi, Simplex-Color, 200 dpi, Duplex-B&W, 200 dpi, Duplex-Gray, 200 dpi, Duplex-Color, 200 dpi. If you have a simplex or a sheetfed scanner, the duplex or the flatbed option will not be available.
 - If any setting for a current profile has been changed, a
 [*] sign will be marked before the name of current
 profile, for example, [* Duplex, Color, 200 dpi]. If
 desire, click the [OK] or [Scan] button and a dialog
 box will be prompted to let you save the new profile.

4.4 The Compression Tab

The Compression tab allows you to compress your scanned image and choose the level of compression. Bi-tonal images are normally compressed using CCITT standard called Group 4 (G4). Color and grayscale images are often compressed using JPEG technology. Move the **JPEG Quality** slider to the right or left to increase or decrease the level of compression. Note the greater the compression level, the lower image quality. Default is 50%.

Note that the compression depends on your image editing application. If your image editing application does not support the type of compression format, then either a warning message will appear or the image quality of the compressed file will not be acceptable.

JPEG (Joint Photographic Editor Group). This group developed and lent their name to a file compression standard for color and grayscale images that is widely used by scanners, and software applications. On Microsoft Windows-based systems, a file with the extension .jpg has normally been compressed using this standard.

For scanning color or gray images, the following compressions are available:

 
- None
- JPEG

For scanning B&W images, the following compressions are available:

- None
- G4

Compression:

To complete your scan at a rated speed, the scanned image is compressed by default during transmission. However, if you wish to obtain the highest image quality, you can choose to uncompress the image data before it is outputted.



To Application:

Choose if you wish to compress the image data and transfer it from the TWAIN driver to the application. Note Bi-tonal images are normally compressed using CCITT standard called Group 4 (G4). Color and grayscale images are often compressed using JPEG technology. Move the [**Image Quality**] slider to the right or left to increase or decrease your image quality. Note the greater the image quality, the lower the compression level. Default is 50%.

Note that the compression depends on your image editing application. If your image editing application does not support the type of compression format, then the image of the compressed file will look abnormal.

From Scanner: (*Note: The availability of this feature varies due to scanner model.*)

Choose if you wish to compress the scanned image and transfer it from the scanner to the TWAIN driver.

Choice: Uncompressed, *Best Image Quality (Low Compression Level), Better Image Quality (Normal Compression Level), Normal Image Quality (High Compression Level). (*: Factory Default)

🎃 Scanner Properties		×
Image Compression Paper S	etting Information	
Front Auto Color Detection	To Application	
Front Color Front Gray Front B&W	Compression:	None -
Rear Auto Color Detection Rear Color Rear Gray Rear B&W		
	From Scenner Compression Mode:	Eest Image Quality
Defaults		OK Cancel

The Compression tab dialog box

4.5 The Color Dropout Tab

4.5.1 Color Dropout Selection


The [**Color Dropout**] tab allows you to select either green, red, blue, or a color of your choice to remove the details of the selected color from a scanned image. This feature is used to sharpen your text when using OCR (Optical Character Recognition) software. Note this feature applies only to the gray or black and white image.

Choice: None, Auto, Remove Red, Remove Green, Remove Blue, Custom

- **None**: Does not remove any color.
- **Auto**: Automatically outputs the image with the details of the primary color removed.
- **Remove Red/Remove Green/Remove Blue**: Outputs the image with the details of the specified color removed.
- **Custom**: Specify the color you wish to remove by entering its RGB (Red, Green, and Blue) value respectively.

Advanced Options:

- **Quality Mode**: Range: 0~20. Default: 10 When [Quality Mode] is selected, you can determine the color to be dropped out using the [Filter Threshold] slider. A lower value will drop more of the selected color out, while a higher value will leave more of the selected color in.
- **Normal Mode**: Use an optimized setting to determine the color.

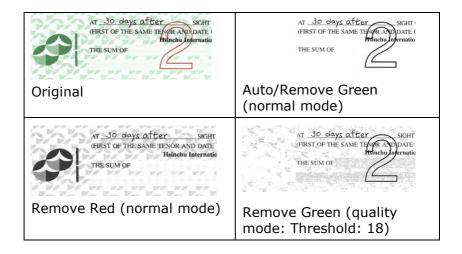

Preview the color dropout result:


To preview the color dropout result, please follow these steps:

- 1. Click the [**Scanner Properties**] icon () on the upper left corner, and choose [**Tab**] to show available tab names.
- 2. Choose [**Preview**] to show the Preview tab.
- 3. Click the [**Preview**] tab to show the Preview page.
- 4. Load your document to the scanner and click the [**Preview**] button to get a preview image.
- 5. On the [Image] tab, click [Gray] or [Black and White] image mode and then choose [Custom] on the [Color Dropout] tab. A [Preview window] button will be displayed.
- 6. Click the [**Preview window**] button to prompt the [**Preview**] window with the previewed image.

- 7. Move your cursor over the preview image. Your mouse cursor now becomes an Eyedropper.
- 8. Click to select a color which you wish to remove.
- 9. Click and hold your mouse button to view the result after removing the specified color. If the result is satisfactory, click [**OK**] to close the Preview window.



The Preview Window

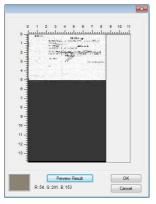

The Color dropout result

mage	Compression	Color Dropout	Paper	Preview Setti	ing Information		
	Front Auto Color	Detection	Color Dr	opout:	None		•
	Front Color				Advanced Pro	ocessing	
	Front Gray		Mode:		Normal		¥
▼ [Front B&W		Filter Th	reshold:	10 <		Þ
_			Red;		71		
	Rear Auto Color	Detection	Green:		184		
	Rear Color		Blue:		184		
	Rear Gray				20.000		
	Rear B&W						
	Defaults					ОК	Cancel

The Color Dropout dialog box

To select a color on the Color palette,

 Click the Color Dropout tab from the Scanner Properties dialog box.

	Front Auto Color Detection	Color Dropout:	None	•
	Front Color		Advanced Processing	
	Front Gray	Mode:	Normal	*
	Front B&W	Filter Threshold:	10 4	Þ
		Red	71	
	Rear Auto Color Detection	Green:	184	
	Rear Color	Blue:	184	
m	Rear Gray]		
	Rear B&W	1		

 Choose Gray or B&W from the Image Selection box and click "Custom" from the Color Dropout drop-down menu. The Color palette appears.

mage	Compression	Color Dropout	Paper	Preview	Setting	Information	
	Front Auto Color	Detection	Color Dr	ropout:		Custom	
	Front Color				L	Advanced Processing	
	Front Gray		Mode:			Normal	
	Front B&W		Filter Th	reshold		10 4	Þ.
_			Red:			136 🛬	1
1.12	Rear Auto Color	Detection	Green:			129 🔿	
	Rear Color		Blue:			119 🜩	
	Rear Gray]	_				
	Rear B&W				-		
						Preview Window	
	Defaults	_				OK Can	

 Move your cursor over the palette. The cursor becomes a cross sign.

mage	Compression	Color Dropout	Paper	Preview	Setting	Information		
	Front Auto Color	Detection	Color Dr	opout:		Custom		•
	Front Color					Advanced Proc	bessing	
	Front Gray		Mode:			Normal		*
	Front B&W		Filter Th	reshold:		10 4		•
			Red:			82 🔹	-	
	Rear Auto Color	Detection	Green:			193 🌲		
	Rear Color		Blue:			62 🜩		
	Rear Gray						+	
	Rear B&W							
						Preview Window		

4. Click to choose a color. The RGB values are changed simultaneously.

4.6 The Paper Tab

The Paper tab allows you to define values relating to image output (i.e., Auto Crop or not, Scan Area, OverScan, Multi-Feed Detection).

Cropping: Automatic Carrier Sheet Mode Scan Area: None ● Potrait Landscape ×:0ifset: 0.00 Y:0ifset: 0.00 Adjustment: Left: Right: 0.00 Background Setting: White Background Unit: inches	
Scan Area: None None Potrat Potrat Pot	
Image: Constraint in the second second section is a second section in the second second section is a second section in the second second section is a second seco	
X-Offset: 0.00 Width: 8.50 Y-Offset: 0.00 Length: 14.00 Adjustment: Left: 0.00 Top: 0.00 Right: 0.00 Bottom: 0.00 0.00 Background Setting: White Background V V 0.00 Feeding Feeding V V V V	
Y-Offset: 0.00 → Length; 14.00 Adjustment: Left: 0.00 → Top: 0.00 Right: 0.00 → Bottom; 0.00 Background Setting: White Background → Unit: Inches → Feeding Feeding Feeding Feeding Feeding	
Adjustment: Left: 0.00 × Top: 0.00 Right: 0.00 × Bottom: 0.00 Background Setting: White Background × 0.00 V Unit: Inches × Feeding V	A V
Right: 0.00 + Bottom: 0.00 Background Setting: White Background + Unit: Inches +	A
Background Setting: White Background Unit: Inches Feeding	
Unit: Inches V	*
Feeding	
Transport Timeout: O Seconds 	

The Paper tab dialog box

4.6.1 Cropping

Cropping allows you to capture a portion of the document being scanned. Choice: Automatic, Automatic (36"), Fixed to Transport, EOP (End of Page) Detection, Automatic Multiple, Relative to Documents.

Options	Description
Automatic	Automatic adjusts the cropping window according to different document sizes and automatically straighten a skewed document. Use this option for batches of mixed-sized documents.
Automatic (36")	Automatically adjusts the cropping window according to different document sizes smaller than 36" and automatically straighten a skewed image. Use this option for batches of mixed-sized document.
	<i>Note: The availability of this feature varies due to scanner model.</i>
Fixed to Transport	This feature allows you to define the area or zone to be imaged. Use for batches of same-sized documents. If you select this option, you can use the arrow keys to define the x and y offset values, width and length to redefine your scanned area. The Display window will show image placement as you change the values.
EOP (End of Page) Detection	This feature allows you to define the area or zone to be imaged. Use for batches of same-width but different length documents. If you select this option, you can use the arrow keys to define the x and y offset values, width and length to redefine your scanned area. The Display window will show image placement as you change the values.

Automatic Multiple	This option allows you to place various sized documents such as photos, ID Cards, or business cards on the flatbed (if available) and lets you create multiple individually cropped images in one scan. Note: To correctly create multiple images, please make sure there is at least 12mm (0.5") of space between each document.
Relative to Document	This option allows you to crop different areas on your documents and deliver these images in B&W, Gray, or Color separately. For example, there are applications which require you to store the entire document in B&W and a part of the document in color to save storage space. This is useful for documents where a photograph or signature appears in a consistent area on the document such as resumes, and so on.

The following options are only available when **Fixed to Transport** is selected.

- **X-Offset** the distance from the left end of the scanner to the left edge of the scanning area.
- **Y-Offset** the position from the top end of the document to the top end of the scanning area.
- **Width** the width of the scanning area.
- **Length** the length of the scanning area.
- **Center:** automatically calculates the x-offset for center-fed feeding based upon document size selected.
- relocate the scan area by click the arrow key on the cross sign while retain the scan size. View the result from the Display window.


The Adjustment option is available when **Automatic** is selected.

 Adjustment —adds a positive/negative margin value Top/Bottom or toward left/right of the image.
 Adjustment is used when the automatic document feeder is used. Adjustment reduces the possibility of corner clipping on skewed images. To set Adjustment values, use the UP/Down buttons to select where you want to apply Adjustment values: Top/Bottom or Left/Right, and then select the amount of inches/mm/pixels applied. Select a value within the range of 0.00 to 1.00 / -1.00. **Relative to Document:** (used for batches of same-sized documents)


This option allows you to crop different areas on your documents and deliver these images in B&W, Gray, or Color separately. For example, there are applications which require you to store the entire document in B&W and a part of the document in color to save storage space. This is useful for documents where a photograph or signature appears in a consistent area on the document such as resumes, and so on.

The following procedure describes how to reproduce the entire document in B&W and a portion of document (picture) in color.


- 1. On the Paper tab, choose "Relative to Document" or "Fixed to Transport" from the Cropping option.
- Choose your scan size from the Scan Area option. The selected scan size will be displayed in a red rectangular box. This is also the scan size of your entire document. (For example, ISO B5. If you have not chosen a scan area and leave the selection as None, then the default area will be the scanner's maximum.)

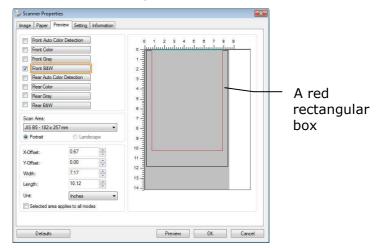


3. Click the Preview tab to display the Preview window. A black rectangular box appears to indicate the max. scan size your have just selected.

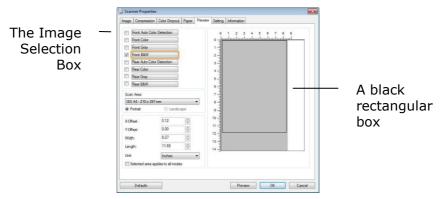

4. Click the Preview button to view the entire image in low resolution to correctly crop your relative scan area.

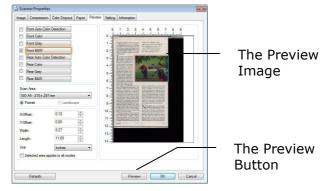

- 5. Select image type from the Image Selection box. The selected image will appear in highlighted color. (For example, Front Color)
- Place your cursor on the Preview window and click your left mouse button. A cross sign will appear as illustrated. Create your relative scan size diagonally by dragging the left mouse button to your preferable size. The selected area will appear in a red box as illustrated.

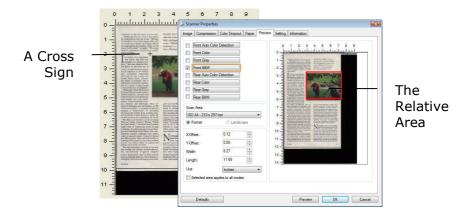

- 7. Check the B&W image from the Image Selection box to scan the entire document.
- 8. Click the Scan button to start scanning the document in two image types and sizes. (See the result in below.)





The entire document in B&W The relative area in color

4.6.2 Other Paper Selection

Carrier Sheet Mode:

Check this option to automatically crop the scan window according to your document size when scanning non-standard document (fragile, irregular-size document) with a carrier sheet (optional). Note: The availability of this option varies due to scanner model.

Loading Documents Using a Carrier Sheet

A Carrier Sheet is a plastic sheet specifically used for loading non-standard document onto the scanner. It allows you to scan document that can not be scanned in the regular way. Also, documents larger than A4 size, such as A3 and B4, can be scanned by folding in half, inserting into the Carrier Sheet, and scanning in duplex mode. You can also scan documents that can be damaged quite easily such as photographs, or irregular size documents that are difficult to load directly such as clippings.

To scan document using a Carrier Sheet,

For documents larger than A4/Letter size, such as A3

- a. Fold the sheet to be scanned in half.
- b. Fold the sheet tightly and smooth out crease. Otherwise, the sheet may be skewed during scanning.

 


1. Open the Carrier Sheet and place the document inside.


Align the top of the document to the top of the Carrier Sheet (the printed area).

For documents larger than A4/letter size, such as A3

Align the top of the document to the top of the Carrier Sheet (the printed section) and the folded portion to the right edge of the Carrier Sheet so that the document fits into the Carrier Sheet at the upper corner.



For non-standard document Center your document in the Carrier Sheet.

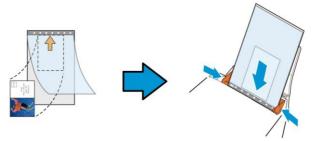

- 2. Load the Carrier Sheet with the gray section (printed section) facing downwards.
- 3. Adjust the paper guides to the width of the Carrier Sheet. Adjust the paper guides so that there is no space between the guides and the Carrier sheet. Space between the guides and Carrier Sheet may cause the Carrier Sheet to become unaligned during scanning, and skew the scanned image.
- 4. Start the scan.

NOTE:

- [Carrier Sheet] is available for the models that support the Carrier Sheet.
 - Some functions are disabled when [Carrier Sheet] is checked.
 - This option may not work properly on some applications.

Scan Area

Choose your desired paper size with the drop-down list box. Or you may select a custom paper size by clicking the **Scan Area** box and then click **Add** to include in the choice.

Choices are listed below:

None
US Letter- 8.5"x 11"
US Legal – 8.5" x 14"
ISO A4 – 21 x 29.7 cm
ISO A5 – 14.8 x 21 cm
ISO A6 – 10.5 x 14.8cm
ISO A7 – 7.4 x 10/5 cm
ISO B5 – 17.6 x 25 cm
ISO B6 – 12.5 x 17.6 cm
ISO B7 – 8.8 x 12.5 cm
JIS B5 – 18.2 x 25.7 cm
JIS B6 – 12.8 x 18.2 cm
JIS B7 – 9.1 x 12.8 cm
Scanner Maximum
Long Page (<118")

Long Page (<118"):

When you need to scan documents whose length exceeds scanner maximum, please choose **Long Page**. Note if **Long Page** is selected, the **Multi-Feed Detection** will not be available. (Note: This option and the maximum allowable document length vary due to type of scanner.)

When **Long Page (<118")** is selected, be sure to specify your document size in the **Length** and **Width** field.

Notice when scanning long page document:

- **1.** Pull out the extension in the ADF Paper Tray.
 - 2. Secure enough space around the Output Tray to prevent the ejected paper from falling off the Output Tray.
 - **3.** To ensure the performance, in color mode, set the resolution to be 300 dpi or lower; in Black and White mode, set the resolution to be 600 dpi or lower.
 - **4.** Depending on your system environments, application, or your specified paper size, there may be insufficient memory to perform scanning.

OverScan

Overscan allows you to add a specific margin at top and bottom or right and left (Options vary based on the type of scanner) of the edge of the image. This is used to reduce possible corner clipping on the skewed images and often applied to a batch of skewed document to be scanned in the auto document feeder. Select a value between 0 and +5 mm. Note the overscan result will not be shown in the Display window and that the availability of the function varies based on type of scanner.

Pre-Feed

Choice: Enable, Disable. If enable is selected, you can set the amount of time the scanner starts pre-feeding your paper after your documents has been loaded into the feeder. The default is disable. Note: The availability of this option varies due to scanner model.

Transport Timeout

Set the amount of time the scanner will wait and then start auto scan after the first scan job is completed. If you have many separate documents need to be scanned at the same scan settings, this feature is especially useful. The default is 0. The value ranges from 0 to 30 seconds.

NOTE:

- Within the specified timeout period, if you load your document to the feeder, the scanner starts scanning automatically.
 - If your scanner has a flatbed option and you place your paper on the flatbed, after the timeout period, you need to click the Scan button on the TWAIN user interface to start scanning.

Background Setting

This option allows you to set your scan background. **Choice: White Background, Black Background.**

Note: For a sheet-fed scanner with an auto document feeder, this option is currently available only in the "Auto crop" mode. For a scanner with a flatbed platen, this option is available either in the "Auto crop" or the "Fixed to Transport" mode.



White Background



Black Background

4.7 The Multi-Feed Detection Tab

Multi-Feed Detection

Multi-Feed Detection allows you to detect overlapped document that go through the auto document feeder. Multi-Feed usually occurs due to stapled documents, adhesives on documents, or electro-statically charged document. Note : The availability of the function varies based on type of scanner.

ge Paper Multi-Feed Detection	Preview Setting Information	
Multi-Feed Detection	ist vaoritii miloi	
Additional Length Detection:	None	
Ultrasonic Detection		
Stop Scanning after Multi-Feed		
Clear the Multi-Feed Paper:	Auto	
/ulti-Feed Alarm:	C:\Windows\Media\ding.wav	🔹 🔃 Browse
	1	
Init: Inches	•	

Additional Length Detection

Additional Length Detection allows you to define the length of document being multi-fed. This value indicates the additional length exceeding your scan area. The Display window will show the size of the document as you change the value. A value of 0 indicates no additional length detection. The Additional Length Detection is best used when scanning same-size documents in the auto document feeder.

Ultrasonic Detection

Ultrasonic Detection allows you to set overlapped document by detecting paper thickness between documents. Note : The availability of the function varies based on type of scanner.

- Stop Scanning after Multi-Feed
- If this is not selected, the scanner will continue scanning the rest document though multi-feed is detected. After the entire document has been scanned, a multi-feed dialog box will be prompted to indicate the page number which has been detected multi-feed and need to be rescanned.
- If this is selected, the following options will be displayed.

Stop: If this is selected, the scanner will stop scanning after a multi-feed is detected. No further dialog box will be prompted.

Ask: If this is selected, the image of the page which has been detected multi-feed will be displayed and three options are provided.

→ Continue Scan:	If the image of the multi-feed page is acceptable, select [Continue Scan] to continue
	scanning the rest pages.

→ Continue Scan(Discard Image):	If the image of the multi-feed page is not acceptable, select [Continue Scan (Discard Image)] to scan the rest pages yet the multi-feed page will be ignored and you need to rescan the page again.
→ Stop Scan:	The scanner stop scans. Remove the remaining pages in the scanner. Remove staples or any adhesive tapes on your document. Or fan your document and rescan the rest pages.

• Multi-Feed Alarm

If a wave file is added, the scanner will make a sound alarm if multi-feed is detected yet no Warning dialog box will be displayed.

How to add the sound alarm :

- 1. Click the Browse button on the right side of the speaker icon. The Open dialog box appears.
- 2. Choose your wave file.
- 3. Click the Open button. The wave file is added.

Units

Defines the primary measurement system. **Inches, Millimeters,** and **Pixels** are available.

4.8 The Preview Tab

The Preview tab allows you to preview (a low-resolution scan) your image before final scan. This preview image lets you allocate your scan area. You can choose your scan area by the "Scan Area" drop down list box or placing your cursor on the Display window and dragging it diagonally on the Display window. Then, a red rectangle box will appear to indicate the selected area.

Note: If you choose "Automatic Cropping" on the "Paper Tab", then to select a scan area on the Preview tab is not allowed.

mage C	Compression	Color Dropout	Paper	Preview	Setting	Information	
Fro	ont Auto Color ont Color ont Gray ont B&W ear Auto Color ear Color ear Gray ear B&W				0 1 1 2 3 4 5 6 7	1 2 3 4 6 7 8 1 2 3 4 6 7 8 1 2 3 4 6 7 8 1 2 3 4 6 7 8 1 2 3 4 5 6 7 8 1 2 3 4 5 6 7 8 1 3 3 5 5 5 5 2 3 5 5 5 5 2 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 5 5 5 5 5 3 <td>The Display Window</td>	The Display Window
	4 - 210 x 297	mm		•	8-	Tateral, A., Sellinger, B., Schlanger, B., Schlanger, S., Sterner,	
Porte	rait	Landsci	аре		9-		
X-Offset	t:	0.12	*		10	Recent sectors and the sector a	
Y-Offset	t	0.00	* *		12	and an and a second secon	
Width:		8.27			13 -		
Length:		11.69	×		14 -		
Unit:		Inches		-	_		
	and some set	plies to all mode	8				

The Preview Tab


4.9 The Enhancement Tab

The Enhancement tab allows you to set following additional image processing settings.

mage Paper	Multi-Feed De	etection	Preview	Enhancement	Setting	Information	
Punch Hole F	<mark>Removal</mark> ole Removal						
Background	Setting						
Background	Processing: None		*				
Sensitivity: Fill Color		4		0			
		White					
Despeckle Noise Numb) Black er:	0	0 Millime		Line Re	moval	
Noise Numb	er:	0	Pixels	5	None	•	
Noise Radiu	s:	1	Pixels	3		100 Millimeters	

The Option tab dialog box

PunchYou can remove punch holes from the output
scanned image when scanning punched document.HoleNote the availability of this feature varies
depending on your scanner model.

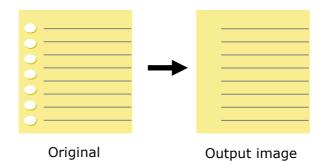

Punch holes can not be removed when:

- Resolution is set lower than 150dpi
- The hole is near the edge of the document
- The holes are not aligned along the edge of the document
- Punch Hole Removal is available only when "Auto Crop" is enabled. If either "Fixed to Transport", "EOP (End of Page) Detection", "Automatic Multiple", "Relative to Documents" is selected from the Cropping option on the Paper tab, the Punch Hole Removal option will be disabled.

Shadow RemovalWhen 「Flatbed」 on the 「Scan
Source」 option is selected on the
「Image」 tab, the 「Shadow
Removal」 option will be enabled. Click
to remove the shadow on the book spine
when scanning a book.

Background Processing: The [Background Processing]

option allows you to smooth background color or remove it to make image clearer. The option is especially useful for documents with color forms such as invoices.

Choices: None (default), Smooth, Removal

- None no background processing will be performed (default)
- **Smooth** produces images with a more uniform background color. This option improves image quality.
- Removal identifies the background color and then removes it.

Sensitivity: Choice: 0, 1, 2, 3, 4. Default: 0

- The higher the value, the more background color will be kept.

Mode: Auto, Moiré

If [**Smooth**] is selected in the [**Background Processing**] option, then the choices for the [**Mode**] option includes Auto, and Moiré.

- **Auto** uses the factory preprogrammed mode to proceed background smoothing.
- Moiré Remove the moiré patterns that appear on the background of the image when scanning printed material.

If [**Removal**] is selected in the [**Background Processing**] option, then the [**Mode**] option will be replaced with [**Fill Color**]. Choices: White, Auto.

- White identifies the background color and substitutes it with white.
- **Auto** identifies the background color and substitutes it with the color of the largest background zone.



Background Processing: None

1 Part Place pict and provided Sector Parts	4614-3382-1	Copens Package Service Manage on With Mary Service Manage on With Mary Service
100	nee 003 578-2366	O Output larger
Comer AVISION INC		1 Peckaging Million State of Automation State
MAN SCIENCE BASED I	NBUSTRY PARK	Madadamaya Dinda Tan Dinda Tan Dinda Tan Dinda Tan Dinda Tan Dinda Tan Bar
Amm 20 CREATION 1 R		B Executed Resulting
MIL CHU CITY	Real TH	7 Payment
Cum TV	Percen 30077	Batting Onesia Dit Kint Distance
men Robert Ch men SMC Inc.		Marine 0938-0425-5206-0913 marine 0000 ber 2015 Marine 1000 ber 2015
Mitras	- LL	Your Internal Billing Reference Ort (1914) Set Association of Association
⇒ Tainan Taiwan, R.O.C	Taiwan, R.O.C 	1 Reputed Separate The Separate Separa
1 Shpinest Mineration Constants to Shee Parkages Sand Sand Sand Sand Sand Sand Sand Sand	0.0 m / / . / . 0.0	For Completion Instructions, see Sank of 600 page.
		B040 8360 0526 = 040
		Ship and track packages at ledex com
and the below of the second se	Plane Machinesteine Marines	

Background Processing: Smooth


From Press print and press hard Same Ministry VII Account/Social S	1-14-3382-9	Copress Fachage Service Martin Parties	Read across and optimes are contain to all destination
Serie's Serie	Non 003 578-2388		to disput using the Air Wayhill.
SHARE AVISION INC		1 Packaging Manufacture and American	
ANTHE SCIENCE BASED IN	DUSTRY PARK	Visituation Induite Induite	
20 CREATION 1 RI		Special Reading	
⇒ HIIN CHU CITY	Т. ти	7 Papenet Internet August the August to	
Leave TH	Restor 30077	Districtor Charges Ditt (Mar) Distances	
SMC Inc. No. 16, R&D F		Balance 0938-0425-5806-0913	
Alban	and the second s	Kor Internal Billing Relevance The Discount of any others The Discount of any ot	
··· Tainan	Taiwan, R.O.C.	8 Supported Supporters that a criteria in traditional size operators in the localized of support as the local of the AP basis in the support of the support of the support of the local operator is the local of the AP basis in the support of the support of the support of the local operator is the local of the support operator is the support of the support of the local operator is the support operator of the support of the support of the local operator is the support operator of the support operator is the support of the local of the support operator operator of the support operator operator is the local operator operator operator operators operato	
Taiwan, R.O.C.		men Ohn the	
Recipion's Tax & Number for Guitante Purposes 10, Million Sector (1999) 1 4 million report	0000	The Congletion Instruction, are back of 9th page.	568
Recipient's line if its active for Caucher Programs is a differentiation of the second research State Produces Indianation State Produces I	0000	The Completion Inductions, and hard of 90 pages.	and many
Novjetni ba E Kanto K Can Se Pagasa Novietni bilana se nako nave Salipeant bilana Se Novietni Salipeant bilana Se Novietni Nave Se Novietni Salipeant Se Novietni Nave Se Novietni Salipeant Se Novietni Nave Se Novietni Salipeant Se Novietni Nave Se Novi Se Novietni Nave Se Novietni Nave Se Novietni Nave Se Novie	0000		

Background Processing: Removal Fill Color: White

NOTE:

Background color in small zone will not be processed or removed.

EdgeCheck White or Black if you wish to add white orFillblack edge on the border of your scanned image.
Enter the value from 0 to 5 mm. Default value is 0.

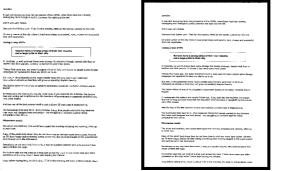

Original

Edge Fill: 5mm (Black)

If you want to add a white or black frame on the edges of the scanned image, check "Edge Extension".

The default value is 0. The maximum value is half of the short side of the selected scan area. For example, if you choose an A4 size (8.26 "X11.69"), then the maximum value of the white or black box is 4.14" (half of "8.26").


Despeckle

Occasionally small dots or specks appear in the background of a scanned image. Remove unwanted speckles provides a cleaner image for OCR (Optical Character Recognition) processing, and also helps to reduce compressed file size.

Define the speckles (also known as image noise) you wish to remove by specifying its number (size) and radius (range). The measuring unit is pixel. The higher the number, the more speckles will be removed.

 \mathcal{A} plague on thee! Hast thou never an eye in thy head? Canst not hear? -The First Part of King Henry the Fourth: 2.1.26-27 A carrier to Gadshill, the host of a tavern.

Before Despeckle (noise number:0, noise radius:1)

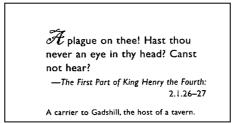

After Despeckle (noise number:22, noise radius:10)

NOTE:

- The function is currently available for Black and White image only.
- To scan at rated speed, it is recommended to set the noise radius up to 10 pixels.

Line Removal: When **Black and White** image mode is selected on the [**Image**] tab, the [**Line Removal**] option will be enabled. Line Removal erases lines on the image and then reconstructs characters so the OCR (Optical Character Recognition) accuracy can be improved.


Choices: None, Form, Horizontal, Vertical

None – the default mode which does not remove any line.

Form – remove any form in the document.

Horizontal – select [**Horizontal**] and then enter the length of horizontal line to remove only the horizontal line exceeding your specified length.

Vertical – select [**Vertical**] and then enter the length of vertical line to remove only the vertical line exceeding your specified length.

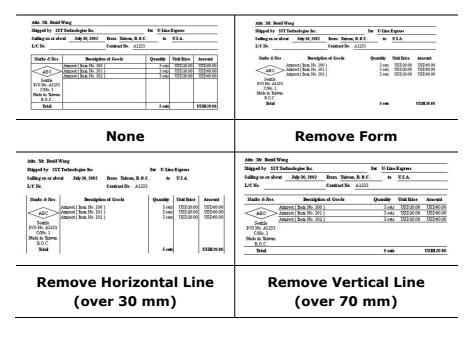

4.10 The Rotation Tab

The Rotation tab allows you to set the following image rotating options:

age	Paper	Multi-Feed Detection	Preview	Rotation	Enhancement	Setting	Infor	mation	
Rotat	tion				95 N	525 929.	063		
Rota	ation Deg	grees :	None			▼ M	lode:	Quick	w
Image	e Control	Options							
Split	t Image:		None			•			
Flip S	ide Rota	tion							
	A A e Control	Book Options			AV OF	anfold			
	6 60mm 2.	options							
5	Mirror								
	Mirror								
	Mirror								
	Mirror								
	Mimor								
	Mirror								
	Mirror								
	Mirror								
	Mirror								
	Mirror								

RotateChoose the rotation angle from the drop downImagelist if you wish to rotate your scanned image.

Choice: None, 90°CW(clockwise), 90°CCW(counter clockwise), 180°, Auto based on contents. Auto rotate every even page.

123	→
1 2 3	2
	$\boldsymbol{\omega}$
Original	Rotate 90°CW
$\tilde{\mathbf{c}}$	173
0	
, 	
Rotate 90°CCW	Rotate 180°

Auto based on contents: Automatically rotate images based on the contents of document. When [¬] Auto based on contents _↓ is selected, its modes will be

enabled to let you select more options. Mode: Quick, Full Text, Complexity

Quick – the default mode to let you rotate images at the fastest speed.

Full Text – the enhanced mode for documents with mixed text orientation.

Complexity – the enhanced mode yet at the slowest speed for document with complex image or text orientation.

Auto rotate every even page:

Automatically rotate 180° on every even page. This is especially useful when you scan the inside pages from a book. As a result, if you choose "Flatbed (book)" from the "Scan Source" option, "auto rotate every even page" will be selected as default.

Note: This option varies based on type of scanner.



Split By splitting an image, two separate images are created horizontally or vertically. This is useful for documents containing two pages per image when you want to save them as two images (one page for one image). Choice: None, Horizontal, Vertical. Default is None.

Horizontal: Divide one image into the upper half and the lower half.

Vertical: Divide one image into the left half and the right half.





Split Horizontally

Split Vertical

Flip Side
RotationSelect "fanfold" to rotate the image of the
reverse side to 180 degrees.

This is applied to double-sided document which are viewed in portrait are sometime fed into the scanner in landscape or vice versa.

Choice: Book, Fanfold.

If "Book" is selected, the image of the reverse side will not be rotated.

The following illustration shows the documents which should be viewed in portrait are fed into the scanner in landscape



Image
ControlCheck the Mirror box if you wish to reverse the right
and left side of your image.Option



Original



The Mirror Effect

4.11 The Separation Tab

The Separation tab allows you to enable the detection engine to detect the blank page, barcode, and patch code and then notify the software application which supports document separation to separate your multi-page documents. Choices: Blank Page Removal, Barcode Detection, Patch Code Detection.

nage	Paper	Multi-Fee	d Detection	Preview	Rotation	Separation	Enhancement	Setting	Information	
Blank	Page R	emoval								
E	Blank Pa	pe Remova	al Threshold:				0	74 BI 16	50	%
	\$200465								8	
	de Dete	ction				÷		-		1
E	nable			Select	Barcode Ty	ype	Zone	All	v	J
Patch	code D	etection								
E	nable									

 Blank Page Removal
 Choices: None, Blank Page Removal Threshold, Image Size.
 None – Do not remove the blank pages.
 Threshold - Move the slider to the left or right to define your threshold for the blank page.
 Image Size – Range: 1~ 10000 KB. Specify your desired image size to detect the page as a blank page. For example, if 3 KB is selected, any page less than 3 KB will be recognized as blank page.

Barcode Detection Check [**Enable**] to detect barcode and notify the software application for advanced processing. Please note the whole document will be checked and no specific detection area needs to be designated.

When the bar code has been detected successfully , a file [avbarcode.ini] will be created and stored in the following path:

Windows XP: C:\Documents and Settings\All Users\Application Data\%PRODUCTNAME%

Vista, Windows 7, Windows 8, Windows 10: C:\ProgramData\%PRODUCTNAME%

Barcode Types:

The following barcode types can be detected.

Two-dimensional codes

- Aztec
- DataMatrix
- PDF417
- QR Code

One-dimensional barcodes:

- Add-2
- Add-5
- Australian Post 4-State
- BCD Matrix
- Codabar
- Code 128
- Code 32
- Code 39
- Code 93
- DataLogic 2 of 5
- EAN 128

- EAN-13
- EAN-8
- GS1 DataBar
- Industrial 2 of 5
- Intelligent Mail
- Interleaved 2 of 5
- Inverted 2 of 5
- IATA 2 of 5
- Matrix 2 of 5
- PostNet
- Royal Post 4-State
- UPC-A
- UPC-Е

NOTE:


- Recommended resolution: 200~600 dpi for regular barcode, 300~600 dpi for QR code
 - Skewed barcodes may not be recognized correctly.
 - Using the same sheet repeatedly may decrease the recognition accuracy due to accumulated dirt on the sheets. If the sheet is not recognized correctly or gets smudged, replace it with a new sheet.

Barcode Zone:

Specify the barcode zone to be detected.

Select $\lceil AII \rfloor$ to checks the whole document and detects barcodes. Or you may speed up the process by specifying a detection area since only the specified area is checked.

Choice: All, Top, Bottom, Left, Right, Bottom Right, Bottom Left, Top Right, Top Left

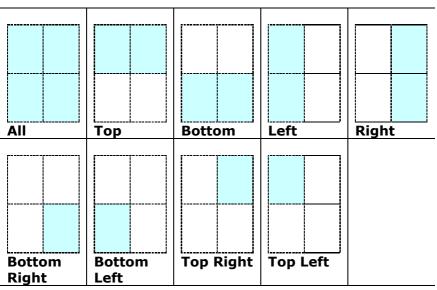


Choice for barcode zone on a page:

Patch code Detection:

Check [**Enable**] to detect patch codes and notify the software application for advanced processing.

A patch code is a pattern of parallel, alternating black bars and spaces (i.e. a barcode) that is printed on a document. Patch code sheet is most commonly used as a document separator in a stack of document. You can find various sizes of patch codes (PDF) by choosing [Start] menu>[All Programs]>[Avision Scanner Series]>[Patch code] in succession.

Simply print the PDF file to produce the patch code sheet. Insert the patch code sheets to wherever you want the file to separate.

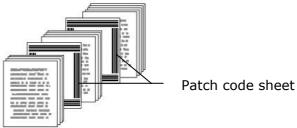

NOTE:

- Use blank white paper.
- Set the scaling to 100%. The sheet is not recognized correctly when printed in a size smaller than the original.
- Do not use toner saving mode. The sheet is not recognized correctly when the print is too light.
- Do not use thin paper in order to avoid bleed-through from the back.
- When you copy a patch code sheet that you printed out, make sure to copy by the same size and brightness as the original copy.
- Use the same sheet repeatedly may decrease the recognition accuracy due to accumulated dirt on the sheets. If the sheet is not recognized correctly or gets smudged, replace it with a new sheet.

4.12 The Setting Tab

The Setting tab allows you to set the following settings:

nage Paper Setting Information	
Cache Mode: Memory Size Memory Size:	*
Energy Saving Control	► Default
Enable Energy Saver Enable Power Off	 I5 minutes 240 minutes
☑ Show Scanning Progress ☑ Show Warning Message	Taba: Compression Calor Dropot. Multi-Feed Detection Preview Catalon
	Separation Enhancement Imprinter
	Enhancement

The Setting tab dialog box

Energy Saving Control	Check the Enable Energy Saver box and move the slider to set the amount of time to start the energy saver after your last action. The range is from 1 to 60 minutes.
Enable Power Off	Check the Enable Power Off box and move the slider to set the amount of time to automatically turn off the scanner after your last action. The range is from 1 to 480 minutes. The default is 240 minutes (4 hours). Note the value of "Power Off" has to be greater than or equal to the value of "Energy Saving".

Cache	Mode: None, Page Number, Memory
	Size . This option allows you to assign a specified memory size from the available RAM to process the image data. By specifying a smaller memory size, you can free more memory for other applications you are running. By specifying a larger memory size, you can have more memory to process the image data especially when you have a large amount of documents needed to be scanned.
	You can also specify your memory size by the page number. For your information, an A4 color document scanning at 300 dpi consumes approximates 24MB.
	Image Count When the selected cache mode is "none", the image count option allows you to assign number of pages you need to scan. For example, if you wish to scan the first two pages, simply move the page slider to 2, and the scan action will be stopped when the scanning of the first two pages have been completed.

Show Scanning Progress	Check and the scanning progress bar will be shown during scanning.
Show Warning Message	Check to show the warning messages such as "ADF pad count exceeds 50,000 scans (the number varies based on type of scanner). Please replace the ADF pad and reset the pad count."
Save Settings after Closing	Check to save your scanner properties settings after leaving the dialog box. Next time when you open the Scanner Properties dialog box, the previously saved settings will be shown.

4.13 The Imprinter Tab

The Imprinter tab allows you to print alphanumeric characters, date, time, document count and custom message on your scanned image if digital imprinter is selected or at the back of your document if external imprinter is selected.

mage Paper Setting	Imprinter	Information				
Digital Imprinter						
Content						
Print All						
Custom:						
Counter	0001		Date/Time:	None	w]Þ	
Custom Font:	Nom	ıal	*			
Advanced				Print Position		
Font Attributes:	Nom	nal	-	Position:	Middle	Ŧ
String Orientation:	Nom	ıal	-	× Offset:	0 mm	
				Y Offset	0 mm	
Sample						
0001						
					More	1
					<u></u>	2

Choice: External Imprinter, Digital Imprinter. If you have installed an external imprinter, choose external imprinter. If you do not have an imprinter, choose digital imprinter. Note External Imprinter provides a vertical and rear-side print capability while digital printer provides a horizontal and front-side print capability.

Contents

Print All	Check Print All to automatically print the text at all pages of your documents. Uncheck Print All to print the text for the first page of your documents only.
Custom	Enter your custom text to be included in your print string.
Counter	Show the document count for the scan session. This value is increased sequentially by the scanner.

Date/Time	Choose if you wish to include the date and time in your print string. Format: YYYYMMDDHHSS For example, 20090402170645-check0001 indicates year, month, date, hour, seconds, your custom text and the counter.
Custom	Choose your desired font.
Font	Choice: Normal, Fixed Width
	Fixed Width (Mono spaced) fonts have a
	fixed character spacing. So each character
	occupies the same width.

Advanced

Font	Choose your font attributes. Choice:
Attributes	Normal, Underline, Double, and Bold.

String Orientation	Choose your string orientation. Choice: Normal, Rotated, Vertical, Vertical Inversion, 90 degrees CW, 90 degrees CCW		
	2010abc	2010abc	
	Normal	Rotated	
	2 0 1 0 a b c	с р О ч О ч О	
	Vertical	Vertical Inversion	
	2010abc	2010abc	
	90 degrees CW	90 degrees CCW	
	If you check the digital imprinter to stamp text on your scanned image, the illustration on normal and rotated string is shown below:		
	2010abc	2010abc	
	Normal	Rotated	

Print Position	Choose the position you wish to print your string. Move the slider to the right to increase the value or to the left to decrease the value. Range: 0~355mm, default:0 mm The value indicates the height from the bottom of your paper to the last letter of your string. This option is available only if an external imprinter is installed.		
		000z1abc 2010	The value of Print Position

Print Position (for digital imprinter)

Choose the position of your printed string. **Choice: Top, Middle, Bottom, Custom.** If Custom is selected, enter the X and Y offset value to specify the position.

More: Click the [More] button to display more font options. This option is available for digital imprinter (stamp text on your scanned image) only. This function is not available on some models.

Font size: Move the slider to change the font size from 1 to 10. **Density:** Move the slider to change the source density from 0 to 255. The selected density will appear at the same time.

Transparency: Move the slider to choose an appropriate transparency value from 0% (not transparent) to 100% (completely transparent) so that your text can be partially transparent and you can see the background image.

4.14 The Information Tab

The Information tab displays the following system and scanner information.

je:	Intel(F) Core(TM) i3-2120 CPU @ 3.30GHz 1023 MB Microsoft Windows 7 Enterprise Service Pack 1 (Build 7601)	^
1 8 '	1023 MB	^
le'	1023 MB	······
ne''	Microsoft Windows 7 Enterprise Service Pack 1 (Build 7601)	
ne:		
	English (United States)	
	Fixed drive C:\Total:30717MBFree:10439MB	
	Fixed drive Y:\Total:102398MBFree:10541MB	E
	Fixed drive Z:\Total:102398MBFree:23311MB	
pace:	10439 MB	
Name:	Avision Capture Tool 1.6 (1.9)	
er Version:	6.11.0329'16	
ersion:	0, 9, 2016, 324	
	USB	
S:	USB	
plution:	600 dpi	
del	xxx	
er:	NO25	-
	Name: er Version: ersion: s: olution: del:	Fixed drive Z:\Total:102398/MBFree:23311MB pace: 10439 MB Name: Avision Capture Tool 1.6 (1.9) er Version: 6.11.032916 ersion: 0.9.2016, 324 USB Julion: 600 dpl del: XXX er: NO25

The Information tab dialog box

The "Report" button :

If you encounter any error message while using the scanner, click the Report button. A report.txt file [Windows XP: C:\Documents and Settings\All Users\Application Data\%PRODUCTNAME%; Vista, Windows 7, Windows 8, Windows 10: C:\ProgramData\%PRODUCTNAME% (C: system drive)] will be generated. Please send this file to the nearest service center for trouble shooting.

The "Reset Roller Count" button :

After scanning over a recommended number of pages (refer to subsequent section 8.4 Replacing the ADF Roller) through the ADF, the ADF roller may be worn out and you may experience problems with document feeding. In this case, it is highly recommended to replace the ADF roller with a new one. (Note the replacement of the ADF roller has to be performed only by authorized service center. Therefore, please return your scanner for roller replacement.) After replacing the ADF roller, click the "**Reset Roller Count**" button to reset the roller count.

NOTE:

The lifetime and the replacing procedure vary based on type of scanner.

5. ISIS Interface Operation

* Please refer to the preceding chapter, Scanner Installation, to install ISIS scanner driver. You may start the supplied QuickScan software application to scan via the ISIS user interface.

The ISIS driver operation method is similar to the TWAIN's. Every function on the ISIS interface screen is briefly described as below:

Mode:	Brightness	OK
Black and White	G Manual C Automatic	Default
Dither:		-
Halftone 4	Darken Norm Lighten —	Cancel
Dots per inch:		Area
300	· · · · · · · · · · · · · · · · · · ·	
Page Size:	<u>C</u> ontrast	
A5 · 14.8 x 21.0 cm	🖌 🧟 Manual C Automatic	
PIXDFLT Version 55.1.260.851 Avision PXN Driver V2.01.062402	128	

Mode: Select one of scan modes, including B&W, gray, color options.

Dither: 5 halftone levels available, can be disabled.

Dots per inch: Select your desired resolution.

Paper Size: Select your desired paper size.

Brightness: Adjust your scan image brightness or darkness.


Contrast: Adjust the range between the darkest and the lightest shades in the image.

Default: Click to reset all settings.

Area: Select your desired scan area or position.

6. Using the Buttons

The following picture shows the 4 buttons and 1 function screen on the scanner.

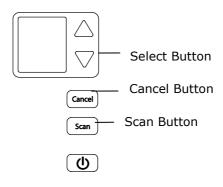

6.1 Installing Button Manager V2


Button Manager V2 provides you an easy way to scan your document and then link the scanned image to your designated software application. All this can be done by a simple touch of the button on the scanner. Yet, before you scan, it is recommended to check the button configurations first to ensure a proper file format and a destination application.

6.2 Checking the Button Configurations before Scanning

1. Button Manager V2 runs from the system tray. After Button Manager V2 and the scanner driver are properly installed, Button Manager V2 is started and the Button icon will be displayed on the system tray at the bottom right corner of your computer screen.




2. Left-click the Button Manager V2 icon to prompt the following Button Panel.

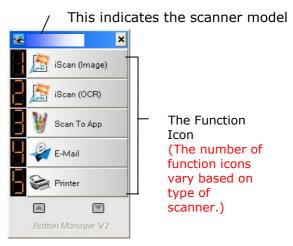

The Button Panel

3. The Button Panel shows the first five scanning buttons. Right-click the button (function) you wish to check. The Button Properties window appears.

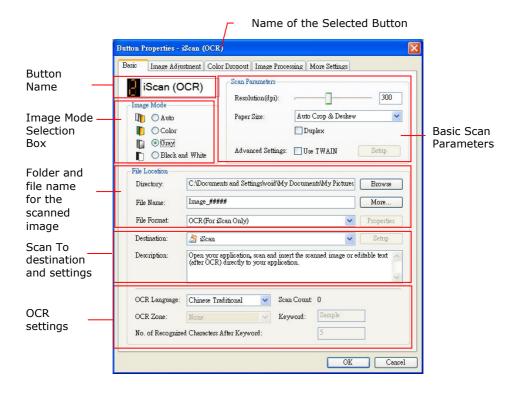

If you wish to change the setting, use this window to reset the setting for the file format, destination application, or other scan settings.

4. Click the OK button to leave the window.

6.3 Scanning From One Touch of the Buttons

- 1. Adjust the paper guide for the width of paper and load the document with their tops into the automatic document feeder.
- Check the button name on the LCD screen to ensure if you are selecting the proper scan settings and destination application. (For example, if you wish to scan with Button, "Scan to App", which opens Microsoft Paint and displays the scanned image in the window of Microsoft Paint, the LCD screen should show "Scan to App").
- 3. Press the **Scan** button on the scanner.
- 4. After the scanning is finished, the Microsoft Paint software will be launched and the scanned image appears in the main window of Microsoft Paint as below.

General	Document feeding mode	Flatbe
Specifications:	Technology	
	Optical resolution	
	Scanning speed	
	RAM	
	ADF min. paper size	4.5 inc
	ADF max. paper size	8.5 inc
	Flatbed max. paper size	8.5 inch
	ADF capacity	
	Operation environment	10
	Storage environment	-2
	Noise	
	Dimensions(H x W x D)	
	Weight	
Сору	First copy out	Color mod
Specifications:	Color copy speed	
	B/W copy speed	
	Copy resolution	
	Copy scaling	
	Multiple copies	

NOTE:

For details information on how to use the Button Manager

V2, please refer to the user's manual in the supplied CD.

7. Starting a Scan from Your Mobile Device


With a *Wi-Fi module, the scanner can be converted into a wireless device. When the MB App has been installed on your mobile device, the scanned images can be received from the mobile device.

*Wired (Ethernet) and Wireless (Wi-Fi) Networks: The availability of these features varies according to your product model.

7.1 Making Preparation

• MB Application


Download the **MB Application** on your mobile device from an application store such as Google Play.

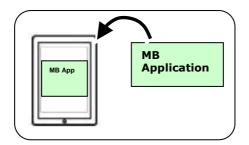

7.2 Connect to a Wi-Fi network in an AP (Access Point) mode

1. On the scanner panel, press ∇ (the Down arrow) to select

[More Settings] and press (OK) to confirm. The following screen will be displayed.

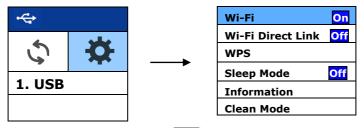

- 2. Select [**Wi-Fi**] and press (OK) to turn on Wi-Fi connection.
- 3. Select [**Wi-Fi Direct Link**] and press (OK) to enter Wi-Fi AP(Access Point) mode in which the scanner its<u>elf act</u>

as an AP. If connection is successful, a Wi-Fi AP icon will be displayed in the screen.

(¹ A ¹⁾	
Wi-Fi	On
Wi-Fi Direct Link	On
WPS	
Sleep Mode	<mark>Off</mark>
Information	
Clean Mode	

To turn off the Wi-Fi connection:

Select [**Wi-Fi**] and press (OK) to turn off the Wi-Fi connection. The Wi-Fi connection will be turned off and the Wi-Fi icon will be disappeared.

In AP (Access Point) mode, your mobile devices and the scanner are connected wirelessly without an additional AP (Access Point) since the scanner itself works as an AP.



7.3 Connect the scanner to a Wi-Fi network in a client mode

In a Client mode, your mobile devices and scanner are connected wirelessly through an additional AP (Access Point). This mode is also the default wireless mode.



Connect Your Scanner to an AP (Access Point):

- 1. Connect the scanner to a wired network via a network cable.
- On the scanner, press the [Setting]>[Information]>[Ethernet] on the control panel. The IP for the wired network will be displayed.



- 3. Open your browser (i.e. 10 or above).
- Type ETHERNET IP address on the URL bar (for example, http://10.1.20.119) to prompt the embedded web page. Please login first with the default user name and password – [admin].


5. Select [Network]>[Wireless (Client Mode)] and then click [Next] in succession.




 Click [Search AP]. A list of available access points (hotspots) will be displayed. Click the access point you want to connect and then enter your security mode and password, and then click [Next]. A summary of the access point will be displayed as shown in below.

_	Device Setting							
Ition	Host Name:	XXXX	-11144	4				
	Wireless client settings					_		
	SSID:					Sea	arch AP	
	Security mode: Password:	Open				ł		
	Wireless client IP settings	5						
	DHCP:	ON			2	~		
	IP Address:		.0	.0	_0			
	Subnet Mask:	0	0	0	.0			
	Gateway IP:	© © Obta	.0 in DNS		_0 address aut	omatically		
R050T		-				omatically	Host Name	AVISION- 01514F
	ESTAREA	Obta				omatically	Host Name Wired Mode	AVISION- 01514F OFF
TP-Lin	ESTAREA k_2.4GHz_6878	Obta				omatically		01514F
TP-Lin xiaoma	ESTAREA k_2.4GHz_6878 kuaiyin	Obta				omatically	Wired Mode	01514F OFF
TP-Lin xiaoma	ESTAREA k_2.4GHz_6878 kuaiyin	Obta				matically	Wired Mode Wireless (Client Mode)	01514F OFF ON OFF R050TESTAREA
TP-Lin xiaoma testonly	ESTAREA k_2.4GHz_6878 ikuaiyin y	Obta				matically	Wired Mode Wireless (Client Mode) Wireless (AP Mode) Wireless SSID Security Mode	01514F OFF ON OFF R050TESTAREA WPA/WPA2-PSK
TP-Lin xiaoma testonly ZyXEL	ESTAREA k_2.4GHz_6878 kuaiyin y	Obta				matically	Wired Mode Wireless (Client Mode) Wireless (AP Mode) Wireless SSID Security Mode Password	01514F OFF ON OFF R050TESTAREA WPA/WPA2-PSK t1stro51
TP-Lin xiaoma testonly ZyXEL ASUS-	ESTAREA k_2.4GHz_6878 kuaiyin y	Obta				matically	Wired Mode Wireless (Client Mode) Wireless (AP Mode) Wireless SSID Security Mode Password Wireless IP Mode	01514F OFF ON OFF R050TESTAREA WPA/WPA2-PSK
TP-Lin xiaoma testonly ZyXEL ASUS- 551D	ESTAREA k_2.4GHz_6878 kuaiyin y	Obta				matically	Wired Mode Wireless (Client Mode) Wireless (AP Mode) Wireless SSID Security Mode Password	01514F OFF ON OFF R050TESTAREA WPA/WPA2-PSK t1stro51
TP-Lin xiaoma testonly ZyXEL ASUS- 551D DLink	ESTAREA k_2.4GHz_6878 kuaiyin y	Obta				matically	Wired Mode Wireless (Client Mode) Wireless (AP Mode) Wireless SSID Security Mode Password Wireless IP Mode Wireless Auto DNS	01514F OFF ON OFF R050TESTAREA WPA/WPA2-PSK tlstro51 DHCP

7. If all information is correct, click [**Export**] to connect to the access point. If connection is successful, a Wi-Fi icon will be displayed in the screen.

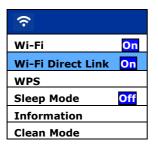

To verify if the connection is successful, you may check the connected AP by selecting
 [Setting]>[Information]>[Wi-Fi]. The connected SSID
 (network name) and its Mac address will be displayed.

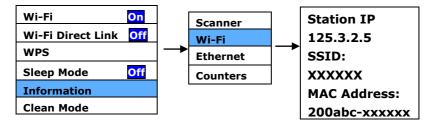

7.4 Connect to a wireless access point using the WPS button

You may connect the scanner to a WPS compatible wireless access point by pressing the WPS button on the back of the scanner.

Before You Begin!

To enable the WPS connection of your access point, please refer to the user's guide of your access point.

Perform the following procedure to connect.

1. Confirm your wireless access point/router has the WPS or AOSS[™] symbol as shown below.



2. Press the WPS button of your wireless access point. (You may refer to the user's guide of your access point/router for instructions on how to use the WPS button.)




3. On the scanner, select [WPS] and press (Scon) (OK) to enter WPS mode.

If Wi-Fi (appears in the WPS option, this indicates the WPS mode of the scanner is ready. Please connect to your specified access point or router within 2 minutes.

	((·	
Wi-Fi On	Wi-Fi	<mark>On</mark>
Wi-Fi Direct Link Off	Wi-Fi Direct Link	Off
WPS	 WPS	Ī
Sleep Mode Off	Sleep Mode	Off
Information	Information	
Clean Mode	Clean Mode	

 To verify if the WPS connection is successful, you may check the connected AP by selecting [Info]>[Wi-Fi]. The connected SSID (network name) and its Mac address will be displayed.

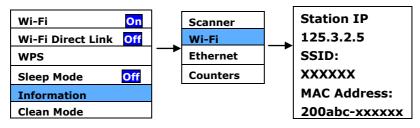


7.5 Starting a Scan From Your Mobile Device

Make sure that the **MB Application** (Scan App) has been installed on your mobile device. The **MB Application** can be purchased for free from an application store such as Google Play.

1. Enable [**Wi-Fi**] from [**Settings**] of your wireless computer, smartphone, or tablet and then choose ADXXXWN-xxxxxx (xxxxxx indicates the last six digits of the Mac Address at the back of the scanner) to be your Wi-Fi network (SSID).

Or choose the access point your scanner has been connected through WPS connection.

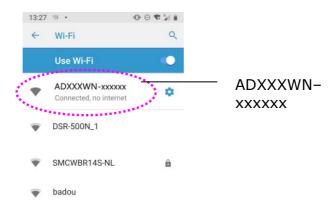

2. Starting MB App by taping [Applications] and then the MB icon Mon your mobile device. The mobile device begins

searching the available scanner in the wireless network.

In a second, the main screen will be displayed if scanner has been found successfully.

N & 0	⊳	;	0 .	10:15	13:54 👳	•	• ⊖ 🕈 🎽 🕯	
	٩	Search A	pps		M	192.168.	Q	
M	0	đ	C	8	300 PPI		Simplex Color	
**************************************	Settings	Messages	Phone	Contacts				This indicates the
	Blossom Bl.	Calculator	Calendar	Camera				scanner model.
Alarm Cloc.	BIOSSOM BL.	Calculator	Calendar	Camera		No files		
Q	\mathbf{i}	8	0			NO IIIES		
Chrome	Clock	Contacts	Downloads	Drive				
0	æ	f		M				
Duo	ES File Exp.	Facebook	FM Radio	Gmail				
G	(2)	Q	2					
Google	Google Ha	Hsinchu Bus	iBUS_新竹。	iTravel_台。				
0			đ			Start sca	in	

NOTE:

If the scanner is not found, please check the followings:

- The scanner is not ready yet. Tap [More Settings] and then [Search scanner] to search the scanner again.
 - Check if the mobile device and the scanner are in the same wireless LAN.
- 3. Check if the default settings meet your requirements. If not, tap the setting icon and change the scan settings to fit your specific scanning task.

ITEM

DESCRIPTION

300

Resolution: Select your desired resolution. The higher resolution, the greater the image quality and disk space.

Choice: 150, 200, *300 dpi



Scan Size: Select your paper size or you may choose Auto to let the scanner detect your document size automatically. Choice: *Auto size, A4, LTR (Letter), LGL (Legal), 4x6, 5x7



File Format: Select the file format for your image.

Choice: *JPEG, PDF, TIFF

Note:

- The JPEG file does not support the B&W image.
- The TIFF file format supports only the B&W image.

|--|

Select to scan the front side (simplex) or both the front side and the rear side (duplex) of your document.

Choice: ***Simplex, Duplex** Note: The duplex mode is available to scan from the auto document feeder only.

Color Mode: Select your desired image mode.

and the lot of	
8-34100-000	

Choice: *Color, B&W, Gray

* Default settings

- 4. Place your document to the scanner.
- 5. Tap the [**Start scan**] button to start a scan.
- 6. In a few seconds, the scanned images will be displayed in a thumbnail view. Tap the image to enlarge the image.




8. Maintenance

8.1 Cleaning the Flatbed Glass

If there is vertical streaks appear on the scanned image, it is possible that the glass may be dirty. Please clean the glass to clear the streaks.

The procedures

- 1. Wet a soft lint-free cloth with some isopropyl alcohol. (95%)
- 2. Open the document cover as shown below. Gently wipe the surface of the glass of flatbed.
- 3. Close the document cover. Your scanner is now ready for use.

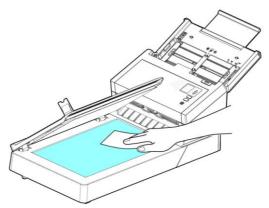



8.2 Cleaning the ADF

From time to time, the Reverse roller and the Feeding Rollers may be contaminated with ink, toner particles, or paper dust. In this case, the paper may not be fed smoothly. Please follow the following steps to clean the Reverse roller and the Feeding Rollers to ensure the best of the scanner.

The Cleaning Steps:


- 1. Soak a clean cloth with some isopropyl alcohol (95%).
- 2. Press the ADF release button and open the front door.

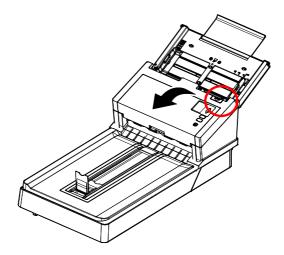


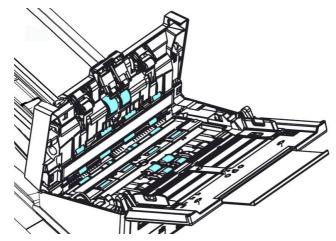


3. Wipe the feeding rollers until they are cleaned.

4. Press both sides of the cover of the ADF reverse roller and pull the cover down.

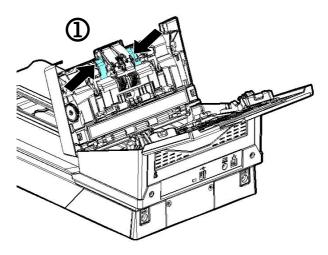

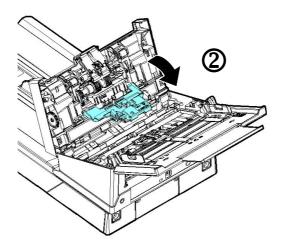

5. Press and wipe the rollers one by one. Rotate the roller until the surfaces are completely cleaned.

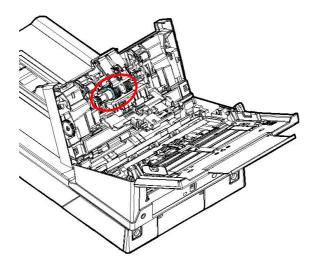


8.3 Using the Clean Mode


When you perform cleaning for the feeding rollers in the lower part of the scanner, the rollers need to be rotated with a light force. Using the advanced [clean mode], the rollers can be automatically rotated forward to help cleaning easier and effective.

To use the Clean Mode to clean the rollers,

- 1. On the scanner, press ∇ (Down arrow) to select [More Settings] and then press (OK) to confirm.
- 2. Use ∇ to select [**Clean Mode**].

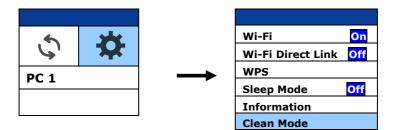

- 3. Open the front cover to the left.
- 4. Soak a clean cloth with some isopropyl alcohol (95%) and wipe the feeding rollers until they are cleaned.

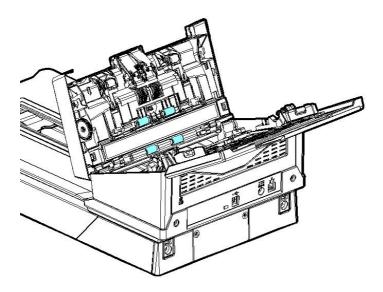


- 5. When the cleaning is done, close the front door and then press the **[Scan**] button **scan**, the feeding roller will be rotated a little automatically.
- 6. Repeat Step 4 and 5 for several time until all the surface of the feeding roller are thoroughly cleaned.
- 7. Short press [Cancel] to go back to the previous screen.

8.4 Cleaning the Glass

If there is vertical streaks appear on the scanned image, it is possible that the glass may be dirty. Please clean the glass to clear the streaks.

- 1. Press the ADF release button. Open the front door.
- 2. Wet a clean cloth with some isopropyl alcohol. (95%)
- 3. Wipe the glass as illustrated below by moving the swab from side to side to rid the dust or dirt.

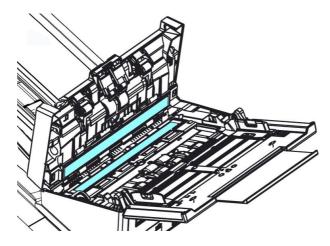


Warning:

- Do not clean the inside of the scanner with water or a mild detergent.
- Do not spray the glass cleaner directly on the glass. If too much glass cleaner is applied, the cleaner could leak under the glass and damage the scanner.
- Make sure there are no staples or paper clips on the surface of your document, otherwise the glass may be damaged.

8.5 Cleaning the Ultrasonic Sensors

If the scanner sometimes fails to detect multi-feed via ultrasonic sensors, it is possible that paper dust or dirt may be accumulated on the surface of the ultrasonic sensors. Please follow these steps to clean the sensors.

- 1. Press the ADF release button. Open the front door.
- 2. Wet a clean cloth with some isopropyl alcohol. (95%)
- 3. Gently wipe the dirt and dust off the surface of the ultrasonic sensors.

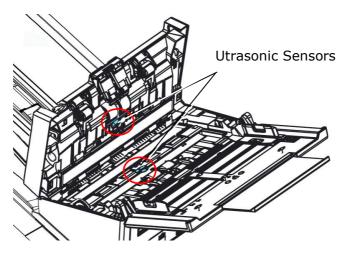


Note:


- If it is difficult to clean, use a cotton swab.
- The availability of ultrasonic sensor varies according to your scanner model.

8.6 Calibrating the Scanner

Calibrate only if the scanned image looks fuzzy, the color looks abnormal (e.g., darker than normal), after more than 8,000 scans, or the scanner has been stored without use for a long time. The calibration process resets the Contact Image Sensor to resume its color and sharpness precision.

 - 1. Turn on the scanner.
- Start your TWAIN-compliant image editing software application such as Avision Capture Tool by choosing Start>Programs>Avision XXXX Scanner>Avision Capture Tool (XXXX indicates your scanner model). The Select Scanner Model dialog box will be displayed.
- 3. Select your driver type and scanner model and click OK. The Avision Capture Tool dialog box will be displayed.
- 4. Click the "**Setup**" button to prompt the TWAIN user interface.
- 5. Click the **"Settings**" tab and then click the **"Calibration**" button. An **"Insert calibration sheet**" dialog box appears.
- 6. Hold the edges of the calibration sheet *(included)* and insert it to the feeder of the scanner as shown.



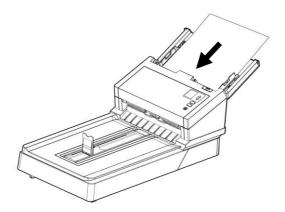

Note: Only hold the edges of the calibration sheet with your fingers and do not touch the white or black area.

- Click the "OK" button on the "Insert calibration sheet" dialog box to start calibrating the scanner.
- 8. When the calibration is completed, the LED light will turn solidly on, if there is no error message, it means the calibration is completed successfully.

Warning: If the calibration process failed, the LED light will be flashing and an error message will be displayed on the screen. Power off the scanner and then repeat the calibration step again.

Warning:


- Do not interrupt the calibration sequence or try to shut off the device while it is calibrating. If you stop the calibration before it has completed, a calibration error may occur. As a result, when you next power up the unit, an error message may be displayed, and you will have to power off the unit and repeat the instructions in this section.
- Calibrate the scanner only when color of the scanned image looks abnormal.
- Keep the calibration sheet from dust and debris. Any dirt may make the calibration chart invalid or impact the calibration result.
- Use only the included calibration sheet to calibrate the scanner.


8.7 Replacing the ADF Reverse Roller

After scanning approximately *100,000 pages through the ADF, the reverse roller will be worn out and you may have problems with document feeding. It is time to replace the Reverse roller. For ordering the replacement, please contact your dealer.


Disassembling Procedure

- 1. Press the ADF release button.
- 2. Gently open the ADF front door to the left.
- 3. Hold the reverse roller cover with your fingers as shown and place it down.

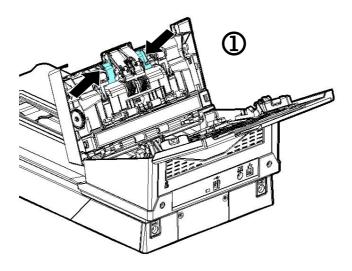


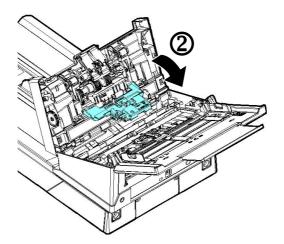

4. Press the right end of the reverse roller externally to detach it from the slot and then detach the left end from its hole.

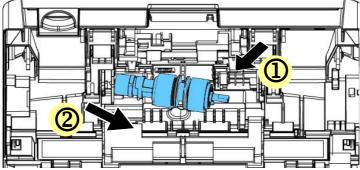


 5. Remove rollers from the shaft.




Reassembling Procedure

 
1. Insert the new rollers to the shaft.



 
2. Grab the right end of the reverse roller (flat side facing Up) and insert it to its original place.



- 3. Insert the left end of the reverse roller to the hole of its original place.
- 4. Insert the right end of the reverse roller to its slot.

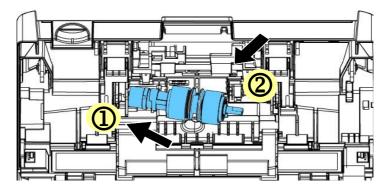

4. Close the reverse roller Cover.

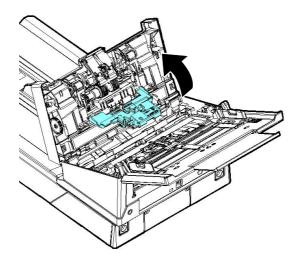

5. Close the ADF cover.

NOTE:


- Consumables must be replaced regularly. It is recommended to purchase new consumables in advance so that they can be replaced before the end of their life time.
 - The replacement cycle is based on the use of A4 (80 g/m2 [20 lb]) wood-free paper or plain paper. The actual cycle varies according to the type of used paper and how frequently the scanner is used and cleaned.
- Use only the specified consumables.
- To purchase consumables, contact the store where you purchased the scanner or an authorized scanner service provider.


8.8 Replacing the ADF Rollers

After scanning approximately *200,000 pages through the ADF, the ADF roller may be worn out and you may experience problems with document feeding. In this case, you may need to replace a new ADF roller. For ordering the ADF roller, please consult your nearest dealer and follow the procedure below to replace it.

Disassembling Procedure


- 1. Press the ADF release button to open the front door.
- 2. Pull the center of the roller cover to open it.

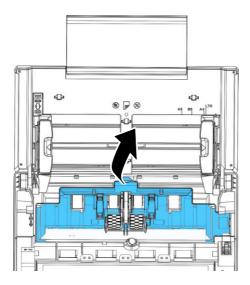

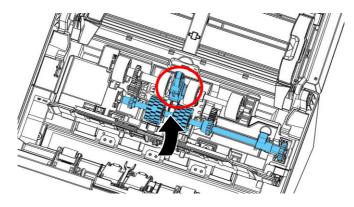


3. Move the belt **UP** as indicated.

4. Move the tab of the ADF roller **DOWN** as indicated.

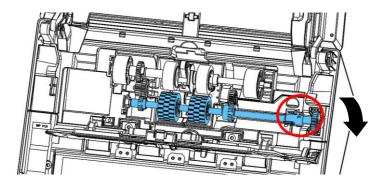



5. Detach the right end of the ADF roller from the scanner and remove the ADF roller.

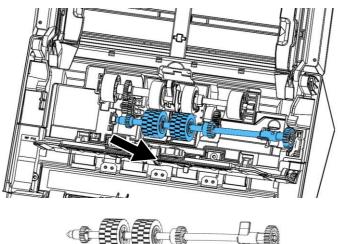

Assembling Procedure


1. Insert the left end of the ADF roller first to its slot and place the ADF roller to its proper position.

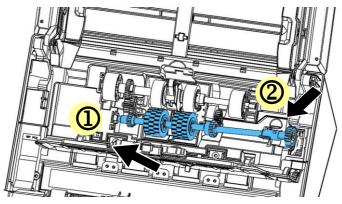

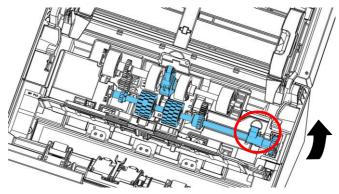

2. Move the tab of the ADF roller **UP**.

3. Pull the belt DOWN.

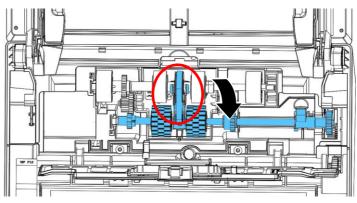

4. Close the ADF roller cover. A snap-in sound could be heard if correctly installed.

NOTE:

• Consumables must be replaced regularly. It is recommended to purchase new consumables in advance so that they can be replaced before the end of their life time.


- The replacement cycle is based on the use of A4 (80 g/m2 [20 lb]) wood-free paper or plain paper. The actual cycle varies according to the type of used paper and how frequently the scanner is used and cleaned.
- Use only the specified consumables.
- To purchase consumables, contact the store where you purchased the scanner or an authorized scanner service provider.

9. Troubleshooting

9.1 Clearing a Paper Jam

In the event of a paper jam, follow the procedures below to remove the paper:

- 1. Press the ADF release button on the right side. Gently open the front door.
- 2. Carefully pull the paper out of the ADF unit.
- 3. Close the front door. Your scanner is now ready to use.

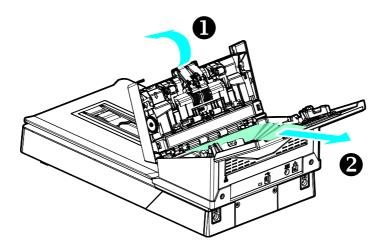

9.2 Error Conditions

If there is error during scanning, the LED light will be flashing in red color and error drawing will be displayed. Refer to the following table to clear the error conditions.

Error Drawing/Meaning	CAUSE	How to restore
Paperjam	 Original has become stuck in the feeder. Original exceeds 	Open the feeder cover and pull the original out of the feeder.
	max. allowable length	
Cover opens	Feeder cover opens.	Close the feeder cover.
Miss Feed	Failed to pick paper.	 Fan the documents. Load the document with its edges slightly touch the paper guides.

Multi-Feed	More than one pieces of paper fed in the feeder.	1. Remove the paper.
AN T		2. Fan the paper for several times.
		3. Make sure the edge of paper near the paper guide and try again.

	More than two sheets of paper are fed in the paper path.	Continue Scan	If the image of the multi-feed page is acceptable, select [Continue Scan] to continue scanning the rest pages.
L		Continue Scan (Discard Image)	If the image of the multi-feed page is not acceptable, select [Continue Scan (Discard Image)] to scan the rest pages yet the multi-feed page will be ignored and you need to rescan the page again.
		[@]	The scanner stop scans. Remove the remaining pages in the scanner. Fan your document and rescan the rest pages.
		Use the Up a to select you	nd Down key (▲/▼) r action.

9.3 Questions and Answers

Question:	When the scanner is powered on, it makes noises and won't stand ready.
Answer:	There are two possibilities:
	1) You might fail to push the scanner shipping lock to its "unlocked" position. If this is the case, pull the scanner status switch to its "unlocked" position first.
	2) The scanner is not placed on an even, flat desktop surface. This may cause the scanner to malfunction.

Question:	Paper becomes jammed during scanning.
Answer:	 Open the front door. Pull out the jammed paper carefully. Close the front door.

Question:	More than one sheet of paper are fed into the scanner.
Answer:	1) Open the scanner front door.
	 2) Remove the multi-fed sheets. 3) Close the front door. 4) Flatten the corners and edges. Loosen the paper before putting it into the paper guide again. 5) Check the feeding roller condition. If necessary, follow the cleaning directions in section 8.2 and perform the cleaning.

Question:	Paper becomes skewed in the scanner.
Answer:	 Use the slide guide to keep the paper path straight. Check the condition of the feeding roller. If necessary, follow the cleaning directions in <u>Section 8.2</u> and perform the cleaning.


Question:	Why does my scanned image
	always come out too dark?
Answer:	 Please adjust the screen settings to sRGB. Please adjust the brightness settings on the screen from application software.

Question:	When I choose optical resolution to be 600 dpi, the "auto crop" and "deskew" functions will be disabled.
Answer:	Since to perform auto crop and deskew consumes great deal of system memory, it is suggested if you wish to perform "auto crop" and "deskew" functions, please choose your optical resolution to be smaller than 600 dpi to prevent a error message.

9.4 Technical Service

Before contacting Avision, please prepare the following information by referring to Section 4.14, The Information Tab:

  Scanner serial & revision number (located on the right side of the scanner);



- Hardware configuration (e.g., your host CPU type, RAM size, free disk space, display card, interface card);
- The name and version of your scanning software application;
- The version of your scanner driver.

Please call us at:

Headquarter

Avision Inc.

No. 20, Creation Road I, Science-Based Industrial Park, Hsinchu 300, Taiwan, ROC TEL: +886 (3) 578-2388 FAX: +886 (3) 577-7017 E-MAIL: service@avision.com.tw Web Site: http://www.avision.com.tw

US and Canada Area

Avision Labs, Inc.

6815 Mowry Ave., Newark CA 94560, USA TEL: +1 (510) 739-2369 FAX: +1 (510) 739-6060 E-MAIL: support@avision-labs.com Web Site: http://www.avision.com

China Area

Shanghai Technical Support Center

7A, No.1010, Kaixuan Road, Shanghai 200052 P.R.C. TEL :+86-21-62816680 FAX :+86-21-62818856 E-MAIL :sales@avision.net.cn Web Site:http://www.avision.com.cn

Europe Area

Avision Europe GmbH

Bischofstr. 101 D-47809 Krefeld Germany TEL: +49-2151-56981-40 FAX: +49-2151-56981-42 E-MAIL: info@avision-europe.com Web Site: http://www.avision.de

Espaço Brasil

Avision Brasil Ltda.

Avenida Jabaquara, 2958 - Cj. 75 - Mirandópolis -CEP: 04046-500 - São Paulo, Brasil TEL: +55-11-2925-5025 E-MAIL: suporte@avision.com.br Web Site: http://www.avision.com.br

10. Specifications

All specifications are subject to change without notice. For the most up-to-date and detailed specifications, please refer to our web site at http://www.avision.com

Model Number :	DL-2011B
Optical Resolution:	600 dpi (ADF)
	1200 dpi (Flatbed)
Output Resolution:	$72 \sim 1200 \text{ dpi}$ (adjustable by 1 dpi increments)
Scanning Modes:	Black & White / Gray / Color
ADF Capacity:	Up to 100 pages (80 g/m ²) (20 lb.)
Max. Document Size:	242 x 356 mm (9.5 x 14 in.)
Min. Document Size:	50 x 50 mm (2 x 2 in.)
Paper Weight:	27 ~ 413 g/m² (7 ~ 110 lb.)
ID Card Thickness:	< 1.25 mm (compliant with the ISO7810 ID-1 type)
Interface:	USB 3.2 Gen 1x1, USB Flash Drive Port, RJ-45 Ethernet 10/100/1000 Mb, Wi-Fi
Power Source:	24V, 1.5A
Operating Temperature:	10º C ~ 35º C
Dimensions: (WxDxH):	
Max.	754 x 321 x 301.4 mm
	(29.69 x 12.64 x 11.87 in)
Min.	545 x 321 x 231.3 mm
	(21.46 x 12.64 x 9.11 in)
Weight:	6.9 kg (15.21 lb.)

Wi-Fi Specifications:

The model (CF-811AC/CF-WU810N) of Wi-Fi module varies according to countries/regions.

Model: CF-811AC

Main Chipset	RTL8811CU
Host Interface	USB 2.0
Frequency Range	2.4GHz/5.8GHz Dual-Channel
Wi-Fi Standard	IEEE802.11a
	IEEE802.11b
	IEEE802.11g
	IEEE802.11n
	IEEE802.11ac
	11b : 1/2/5.5/11Mbps
Transmit Speed	11g:6/9/12/18/24/36/48/54Mbps
Transmit Speed	11n : 200Mbps
	11ac : 433Mbps
Transmit Power	Max. 17 dBm
	WPA-PSK/WPA2-PSK
Security	WPA/WPA2
	WEP
Operating System	Windows XP/Vista/7/8/8.1/10 (32/64 bit)
	MacOS10.6~MacOS10.15

Model: CF-WU810N

Main Chipset	RTL8188EUS
Host interface	USB 2.0
Frequency Range	2.412~2.484 GHz
Wi-Fi Standard	IEEE 802.11b
	IEEE 802.11g
	IEEE 802.11n
Transmit Speed	11b: 1/2/5.5/11 Mbps
	11g: 6/9/12/24/36/48/54 Mbps
	11n: 150 Mbps
Transmit Power	Max. 18 dBm
Security	WPA-PSK/WPA2-PSK
	WPA/WPA2
	WEP
Operating System	Windows XP/Vista/7/8/8.1/10 (32/64 bit)
	Max OS 10.6 ~10.11
	Linux Kernel 2.6.18~3.10